

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.

Installation Precautions for 811827 ignition coils

After installing the coil on your stator plate be sure that neither of the terminals that the wires come from are touching the stator plate. It may be necessary to slightly bend them to keep from touching the stator plate. If terminals ground to stator the coil will not work.