


# # B6C-17508-RR 2 Speed Windshield Wiper Motor for 1956-60 Ford Pickup Truck

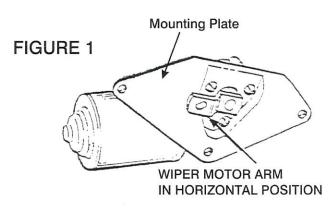

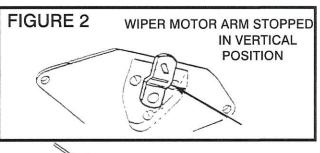

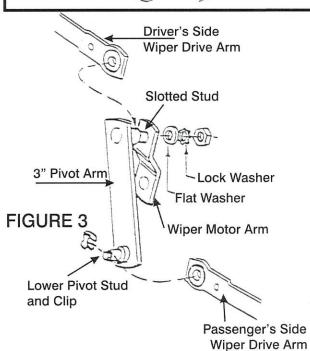



## www.Dennis-Carpenter.com

21 Carpenter Ct. NW Concord, NC 28027-4627 704-786-8139

## HOW TO INSTALL WIPER MOTOR

## STEP 1

Remove original vacuum wiper motor unit from fire wall.

## STEP 2

The electric wiper motor arm should be set in the horizontal position as shown in figure 1. Apply rubber pad to wiper assembly mounting plate and attach assembly to the firewall. Note that the rubber pad goes between the mounting plate and the firewall.

### STEP 3

Connect the electric wiper motor wiring system as described on the WIRING DIAGRAM SHEET.

#### STEP 4

After wiring has been completed, start the wiper motor then stop it so that the wiper motor arm is in a vertical position. (Shown in figure 2)


#### STEP 5

Attach the driver's side wiper drive arm to the slotted stud on the 3" pivot arm then attach and secure that assembly to the wiper motor arm. (See figure 3)

## STEP 6

Attach the passenger's side wiper drive arm to the lower pivot stud on the 3" pivot arm, secure with snap-on clip.


## WIPER STOP ADJUSTMENT

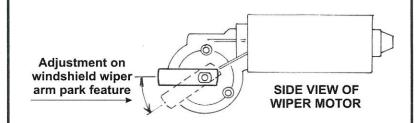

If windshield wipers in stop position need further adjustment, remove the motor drive arm from the shaft, rotate the arm clockwise or counter clockwise then reinstall the arm to the shaft.

# # B6C-17508-RR 1956-60 Ford Pickup Truck 12 Volt Wiper Motor Wiring Diagram

## WIRE CONNECTIONS FROM MOTOR TO SWITCH AND SWITCH TO POWER SOURCE

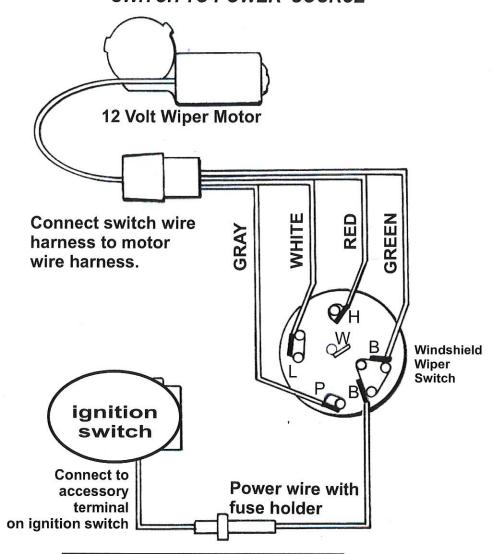

# WIRING AND SWITCH INSTALATION STEP 1

Remove vacuum windshield wiper control switch from the dash.

#### STEP 2

Connect the wire harness from the wiper motor to the windshield wiper switch. (See the diagram at left for proper wire placement.)

## STEP 3

Install and secure the electric wiper motor switch into the hole which held the original wiper control. Reinstall the knob onto the switch.

#### STEP 4

Connect the power / fuse wire from the electric on-off wiper switch to the accessory terminal located on the ignition switch.



www.dennis-carpenter.com

704.786.8139

## **NOTICE: CHECK THE FUSE**

If after installation your electric wiper motor does not run make sure that the inline fuse has not blown.