

REMOVING AND INSTALLING
DOME LAMP LENS FOR 1957-58.
ALL EXCEPT CONVERTIBLE

REMOVING:

There are 5 rivets which hold the lens in the lens housing. These can be removed by carefully grinding the heads off. The retainer and lens now can be taken out. The remaining part of the rivet should be ground off evenly with the lens housing.

INSTALLING:

Center punch and drill (1/8" drill) each of the 5 rivet positions in the lens housing.

Replace the lens and retainer into the housing and fasten together with the five (6 x 38) screws.

BBA-13783-A

1957-58
EXCEPT CONV.
DOME LIGHT LENS

19 SEP 06