

#C1TZ-9275-K Ford Truck Fuel Sending Unit Installation


CAUTION: DO NOT PERFORM THE FOLLOWING REPLACEMENT PROCEDURE IN THE PRESENCE OF FLAME OR SPARKS. KEEP REPAIR AREA WELL VENTILATED AND FREE FROM FUEL VAPOR ACCUMULATION.

REMOVAL

1. MOVE SEAT FORWARD.
2. DISCONNECT FUEL SENDER WIRE CONNECTOR.
3. REMOVE AND DISCARD FUEL SENDER MOUNTING SCREWS.
4. REMOVE FUEL SENDER ASSEMBLY AND DISCARD GASKET.

INSTALLATION

1. CLEAN GASKET MOUNTING SURFACES.
CAUTION: DO NOT ALLOW FOREIGN MATERIAL TO ENTER FUEL TANK OPENING.
2. POSITION NEW MOUNTING GASKET ON FUEL TANK OPENING WITH INDEX NOTCH FACING AWAY FROM FUEL TANK WELD SEAM. ALIGN GASKET WITH THREADED HOLES.
3. INSERT FUEL SENDER ASSEMBLY THROUGH GASKET AND FUEL TANK OPENING.
4. POSITION FUEL SENDER WITH FLANGE INDEX TAB FACING TOWARD TUBE FITTING OF FUEL INLET SUPPLY PORT.
5. ALIGN SCREW HOLES WITH GASKET AND THREADED HOLES AROUND FUEL TANK OPENING.

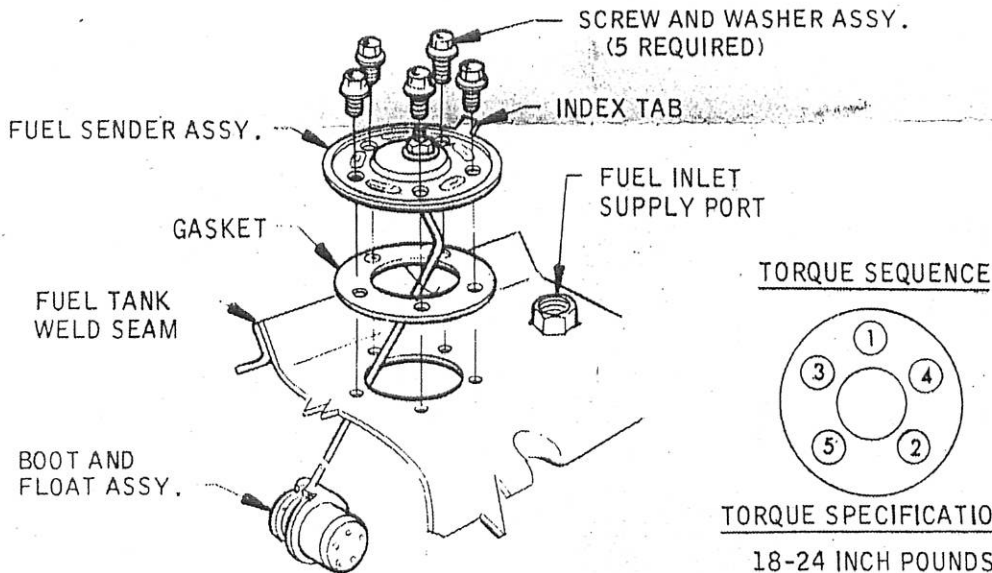

6. THREAD MOUNTING SCREWS INTO THREADED HOLES UNTIL SEALING WASHERS TOUCH SURFACE OF FUEL SENDER FLANGE.

CAUTION: DO NOT RE-USE OLD MOUNTING SCREWS.

7. TIGHTEN EACH MOUNTING SCREW TO APPROXIMATELY ONE-HALF OF SPECIFIED TORQUE AS SHOWN IN ILLUSTRATED TORQUE SEQUENCE.
8. FOLLOWING TORQUE SEQUENCE, TIGHTEN EACH MOUNTING SCREW TO SPECIFIED TORQUE.
9. CONNECT FUEL SENDER WIRE CONNECTOR TO CONNECTOR TERMINAL.
10. FILL FUEL TANK AND ROAD TEST VEHICLE. CHECK FOR FUEL LEAKAGE AT GASKET AND SCREW SEALING SURFACES.



Manufacturing Quality Ford Restoration Parts

704-786-8139

4140 CONCORD PARKWAY, S.W., CONCORD, NC. 28027

www.dennis-carpenter.com