


#01C-8121460-S 1940-41 Pickup Door Glass Anti-Rattler Set
#21C-8121460-S 1942-47 Pickup Door Glass Anti-Rattler Set

Flexible "U" channel must be bent to the shape of the upper door frame. Secure with machine screws.

INSIDE OF PASSENGER DOOR SHOWN

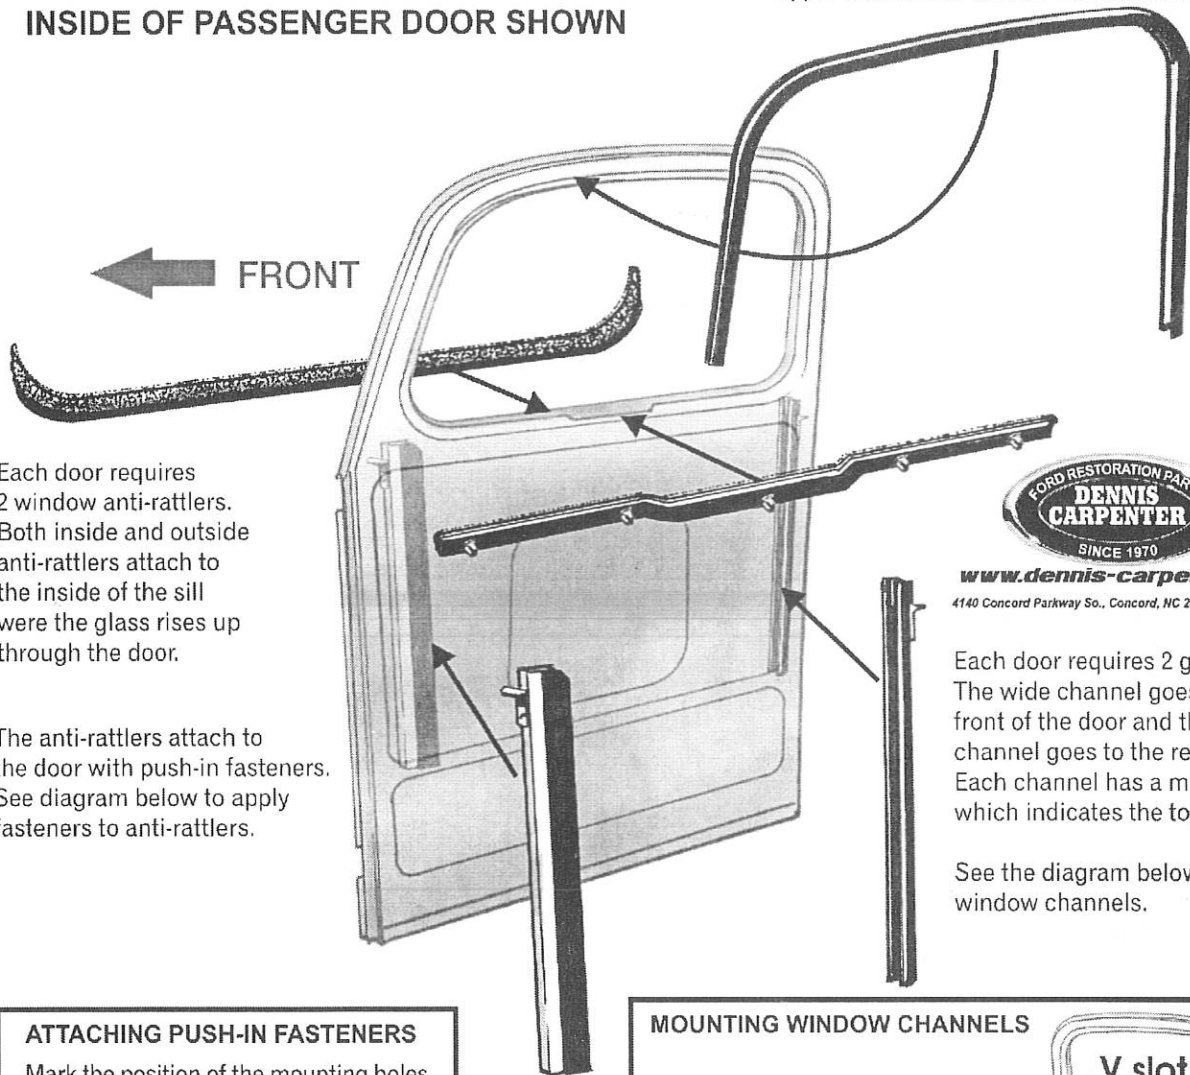

Each door requires 2 window anti-rattlers. Both inside and outside anti-rattlers attach to the inside of the sill where the glass rises up through the door.

The anti-rattlers attach to the door with push-in fasteners. See diagram below to apply fasteners to anti-rattlers.



www.dennis-carpenter.com

4140 Concord Parkway So., Concord, NC 28147 (704) 786-8139


Each door requires 2 glass runs. The wide channel goes to the front of the door and the narrower channel goes to the rear. Each channel has a metal tab which indicates the top.

See the diagram below to mount window channels.

ATTACHING PUSH-IN FASTENERS

Mark the position of the mounting holes from the door to the anti-rattlers. (Kit supplies 5 fasteners per anti-rattler)

The fuzzy part of the anti-rattlers faces the glass so the head of the push-in fasteners mounts to the smooth side anti-rattlers. They will snap into the holes on the door holding anti-rattler into position.

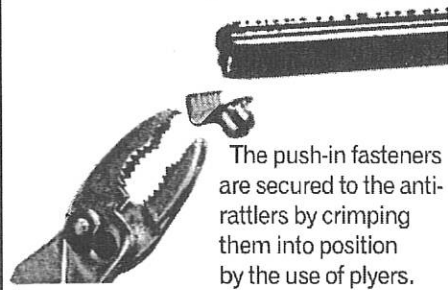

The push-in fasteners are secured to the anti-rattlers by crimping them into position by the use of pliers.


MOUNTING WINDOW CHANNELS

To secure the window channel inside the door, hook the tab of the window channel into the V shaped slot in the metal channel inside the door which is part of the door.

Pivoting from the V slot, push the window channel into the door metal channel.

At the bottom of the door metal channel is a tab which bends up into the window channel to secure the two together.

Both front and rear window channels are secured in the same manor.

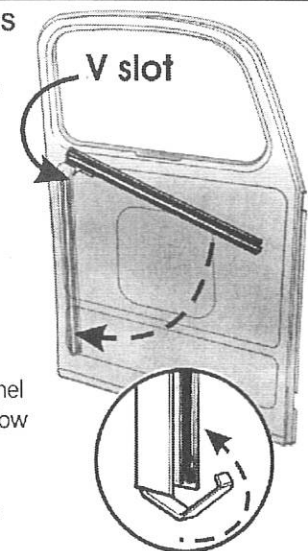

BEND TAB OF DOOR METAL CHANNEL TO SECURE WINDOW CHANNEL