

# 1949-51 Ford car windshield installation

Applies to the following: #8A-7003110-D, 0A-7903110-C, 8A-7003110-E, 8A-7603110-B, 8A-7903110-A, 0A-7003110, 0A-7603110



## Helpful Tip

Use masking tape to temporarily hold the seal onto the glass before installing the window. After the window has been installed the tape can be removed.

### NOTE


It is recommended to use an auto glass sealer when installing the new rubber window seals to prevent possible leaking. Permatex Auto Glass Sealer 7651259 is one example.

## INSTALLING WINDSHIELD RUBBER

1. Remove all old weather stripping and weather stripping sealer from the windshield opening flange. Clean the flange area thoroughly.


2. Trial fit the rubber seal onto the windshield. This allows you to orient how the seal should fit the on the glass. Remove seal and prepare it for sealer application.

NOTE: If the car has outside windshield moldings they must be installed into the weather stripping at this time.

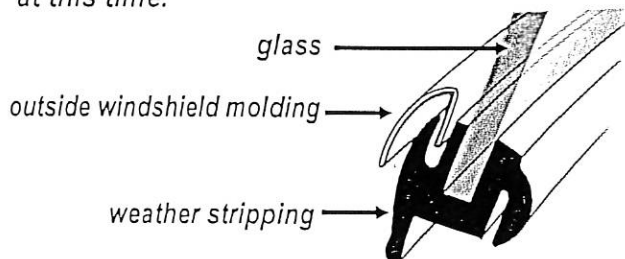



3. Apply a continuous bead of sealer to the windshield opening flange on the car. Apply a continuous bead of sealer into the glass crevice of the rubber seal then install the weather strip onto the glass. If the car also has outside windshield moldings, they must be installed into the weather stripping at this time.

### Typical draw cord procedure

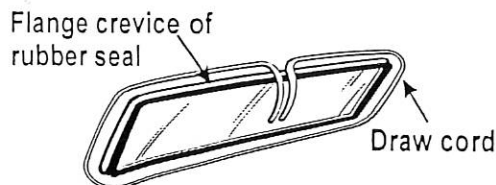


Install draw cord into flange crevice of rubber seal around entire window.

4. Apply a soap/water solution to the flange area of the rubber seal, then install a draw cord into the flange crevice of the weather stripping. Allow about 12 inches overlap at the top center

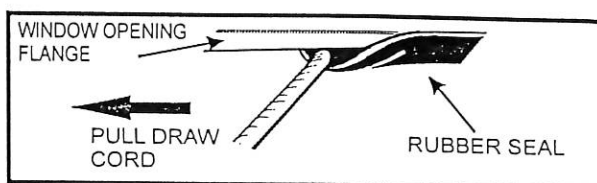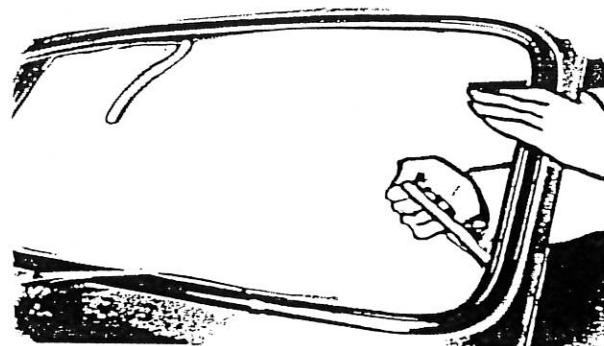

5. Position the glass assembly in the opening from the outside and have a helper apply pressure to the outside of the glass. From the inside, begin pulling the draw cord. This procedure allows the rubber seal to be pulled over the window opening flange area. Alternate from side to side when pulling the cord to keep the installation even. The draw cord operation will be completed at bottom center of the windshield. Pull the cord completely out of the rubber seal.

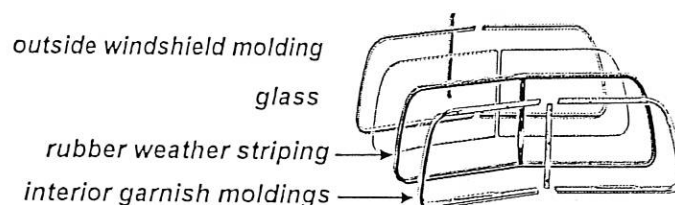

6. Once the windshield has been installed, tap the windshield around the perimeter with the palm of your hand to ensure that the rubber seal has been seated onto the window opening flange.



4140 Concord Parkway So., Concord, NC 28027  
(704) 786-8139 email: info@dennis-carpenter.com  
www.dennis-carpenter.com