


INSTALLATION INSTRUCTIONS FOR BACK WINDOW WEATHERSTRIP

NOTE: Before Removing Glass and Old Rubber Seal, make a Mark on the Roof Panel above the Vertical Rubber which divides the Side Glass from the Center Glass. See Sketch: These will be Reference Marks when installing the New Weatherstrip.
Remove Rubber Lockstrip from Center Groove of the Weatherstrip.

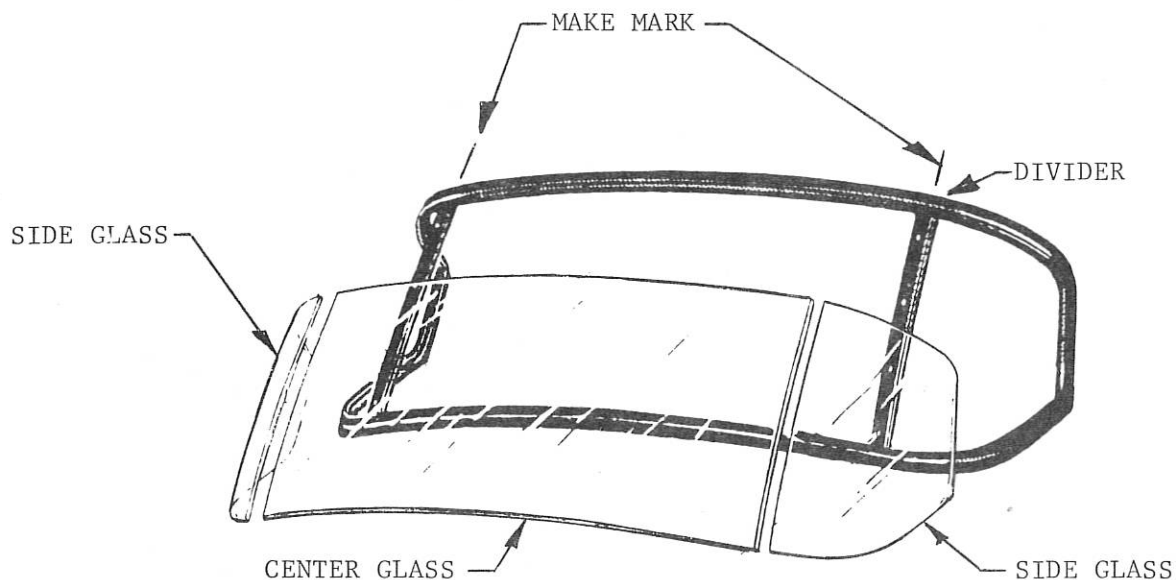

STEP #1

Place the Center Glass into the Weatherstrip Rubber.

STEP #2

APPLY SILICONE TO THE WEATHERSTRIP. IT WILL BE EASIER TO INSTALL

Starting at the Top First, position the Weatherstrip in place on the car. Use the Marks which were made above the Vertical Dividers of the Old Rubber to center the Weatherstrip and Glass in the same location.

STEP #3

The Sides of the Weatherstrip can be put into position on the Body.

STEP #4

Each Side Glass can now be slipped into the Weatherstrip.

STEP #5

Place the Rubber Lockstrip into Position in the Groove of the Weatherstrip Starting at the Bottom Center of the Back Window with the V of the Lockstrip Toward the Groove in the Weatherstrip. A Wide Screwdriver should be used to work the Lockstrip into the Groove.