


1951-52 FORD PICK-UP TAILGATE CHAIN ASSEMBLY

1. Insert welded chain link end and tailgate chain support bolt into the elongated chain link then close tightly.

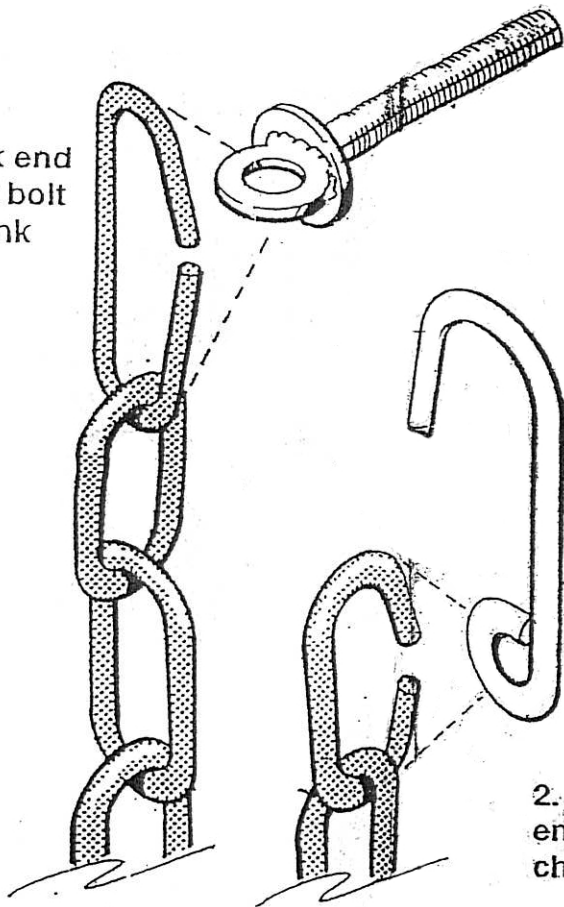

2. Open up the cut chain link end, insert hook then close chain link tightly.