


WIRING DIAGRAM
(HIGHLANDER EXCEPT 1959 SPECIAL)

Fig-16

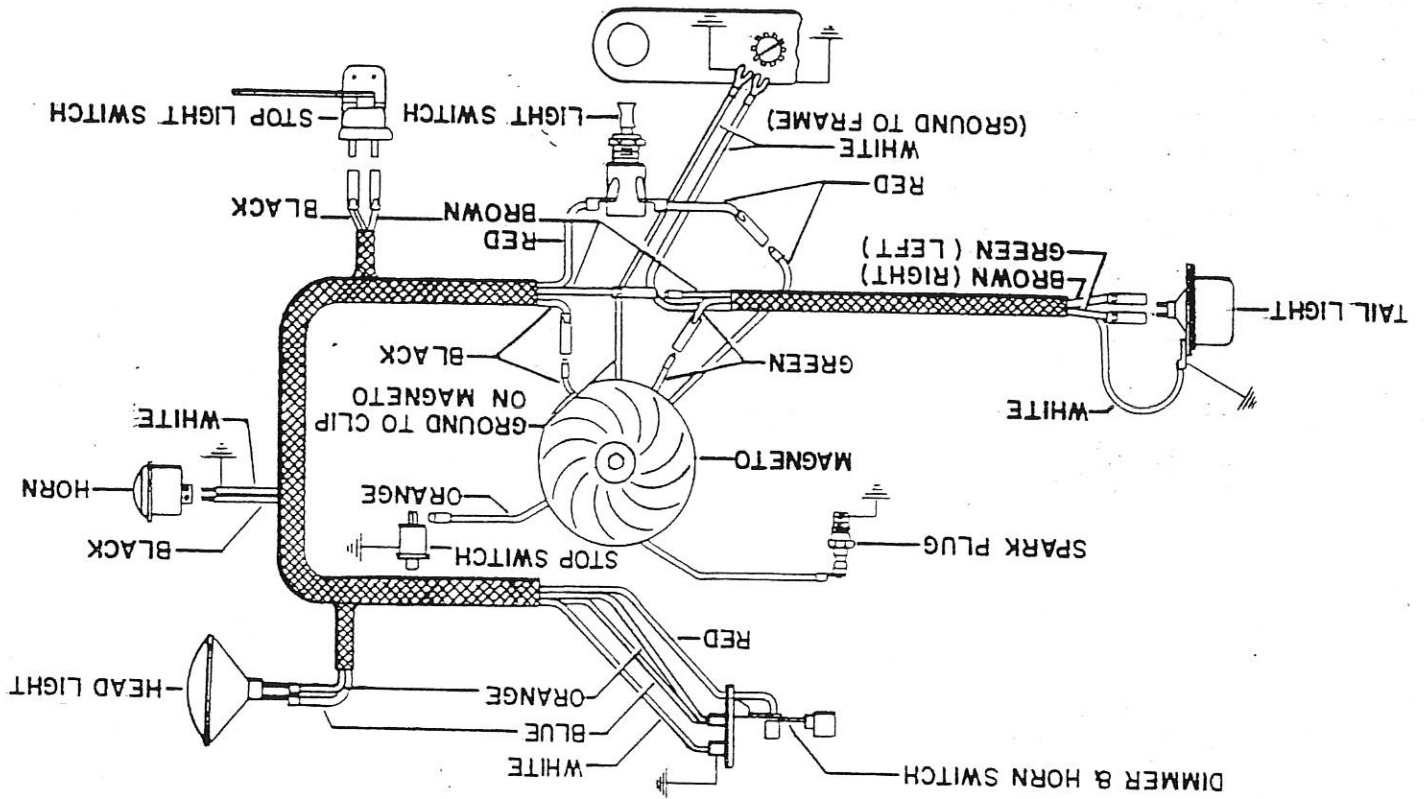

GENCO
CHRYSLER
CORPORATION
MOTOR DIVISION
MOTOR DIVISION
MOTOR DIVISION

200007
1959-64
LATE HIGHLANDER
WIRE WORKS