



21C-8344456-PR 1942-50 Ford Pickup Tailgate Chain Assembly

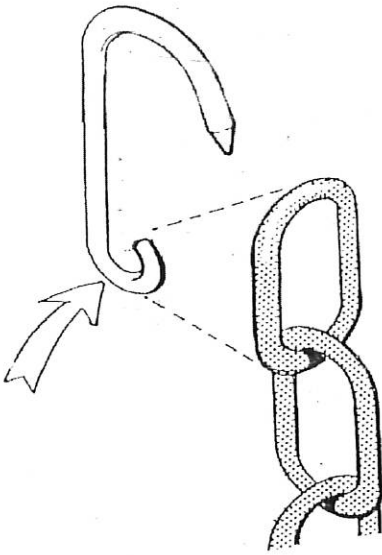

1. Open the "eye" end of the hook, insert the welded chain link end and close the eye tightly.

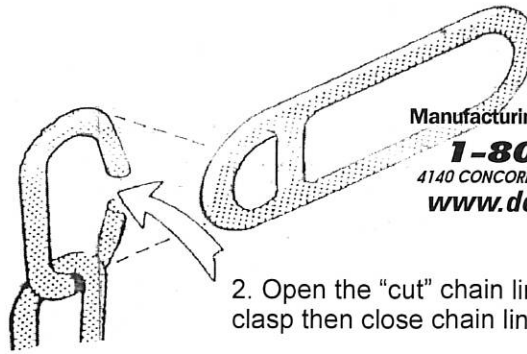

2. Open the "cut" chain link end, insert the clasp then close chain link tightly.




Manufacturing Quality Ford Restoration Parts

1-800-476-9653


4140 CONCORD PARKWAY SO., CONCORD, NC. 28027

www.dennis-carpenter.com

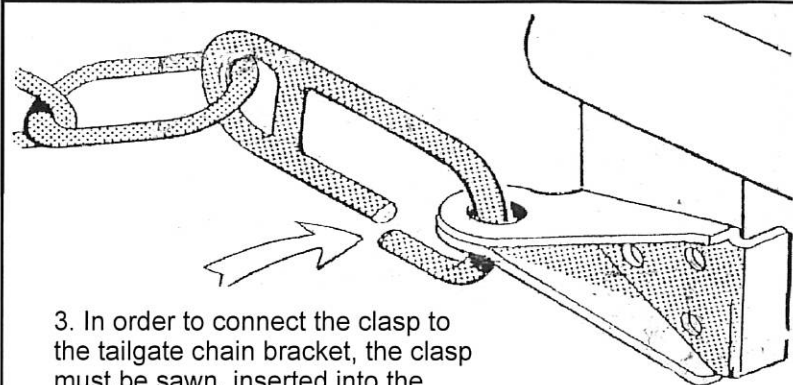


3. In order to connect the clasp to the tailgate chain bracket, the clasp must be sawn, inserted into the bracket then re-welded.

21C-8344456-PR 1942-50 Ford Pickup Tailgate Chain Assembly

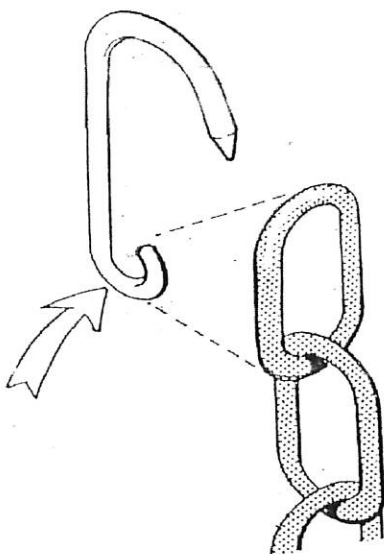

1. Open the "eye" end of the hook, insert the welded chain link end and close the eye tightly.

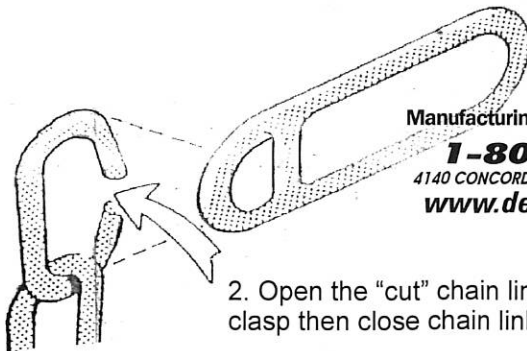

2. Open the "cut" chain link end, insert the clasp then close chain link tightly.




Manufacturing Quality Ford Restoration Parts

1-800-476-9653

4140 CONCORD PARKWAY SO., CONCORD, NC. 28027

www.dennis-carpenter.com

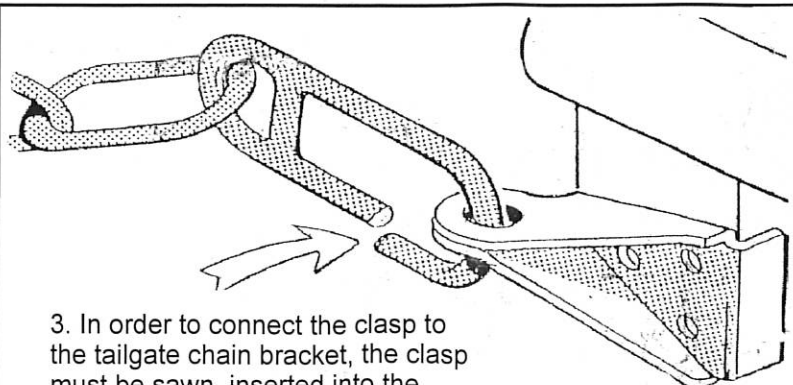

3. In order to connect the clasp to the tailgate chain bracket, the clasp must be sawn, inserted into the bracket then re-welded.