


IMPLEMENT LAMP ATTACHING KIT NO. 309533 FOR 601 - 901 TRACTORS

<u>New</u>		<u>Replaces</u>	
8N-13472	Headlamp Bracket	8N-15532	Back-up Lamp Mounting Spacer
311799	Wire Clip	New	
311780	Cupped Washer	New	
311778	Rubber Boot	New	
		New	

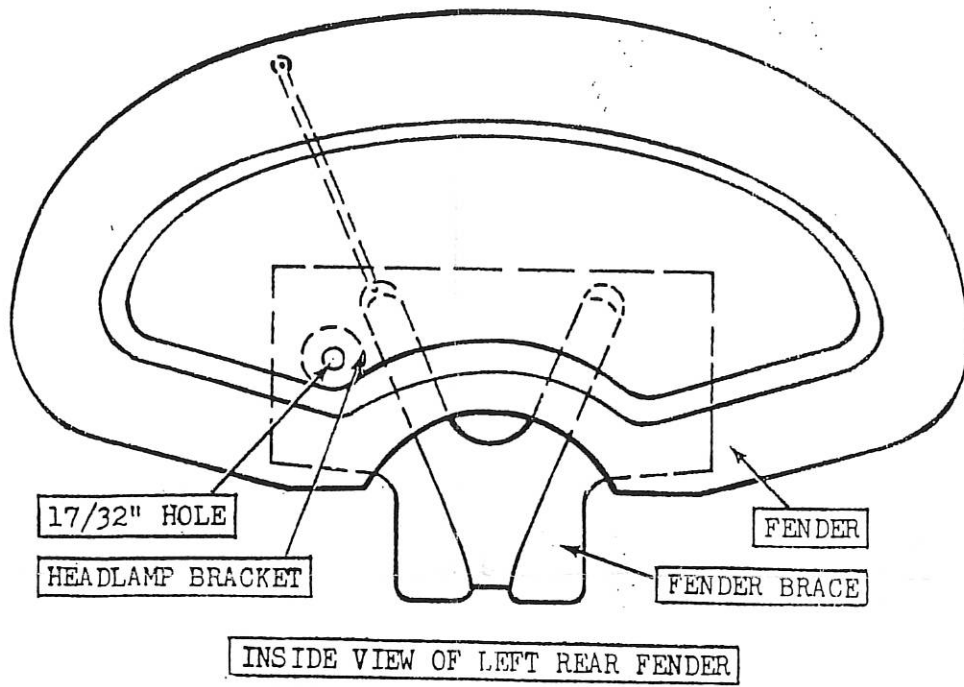

INSTALLATION OF KIT ON 601 - 901 TRACTORS

1. Use the 8N-13472 Headlamp Bracket for a template and drill a 17/32" hole in the fender at the location as shown in the sketch.
2. Insert the implement lamp wire and securing bolt through the headlamp bracket and the hole drilled in the fender.
3. Position the wire clip, with the offset out, cupped washer with the cup out, and lock washer over the end of the wire and bolt and secure to the tire side of the fender with the nut.
4. Thread the boot over the implement light wire and secure over the cupped washer.
5. Thread the sleeve over the wire and through the clip and secure to the boot. The sleeve and boot completely cover and protect the wire.
6. Position the wire and make the electrical connection