


876258

Center Tandem Seat on body surface approximately 6" behind existing seat and mark position for drilling four (4) 5/16" holes.
Drill holes in body and attach Tandem Seat in place using washers and nuts supplied.

Ref. #	Part #	Part Name	No. Req'd.
1	DO-16	Seat	1
2	96337	Plain Washer	4
3	96336	1/4" Lock Washer	4
4	96416	1/4-20 Hex Nut	4

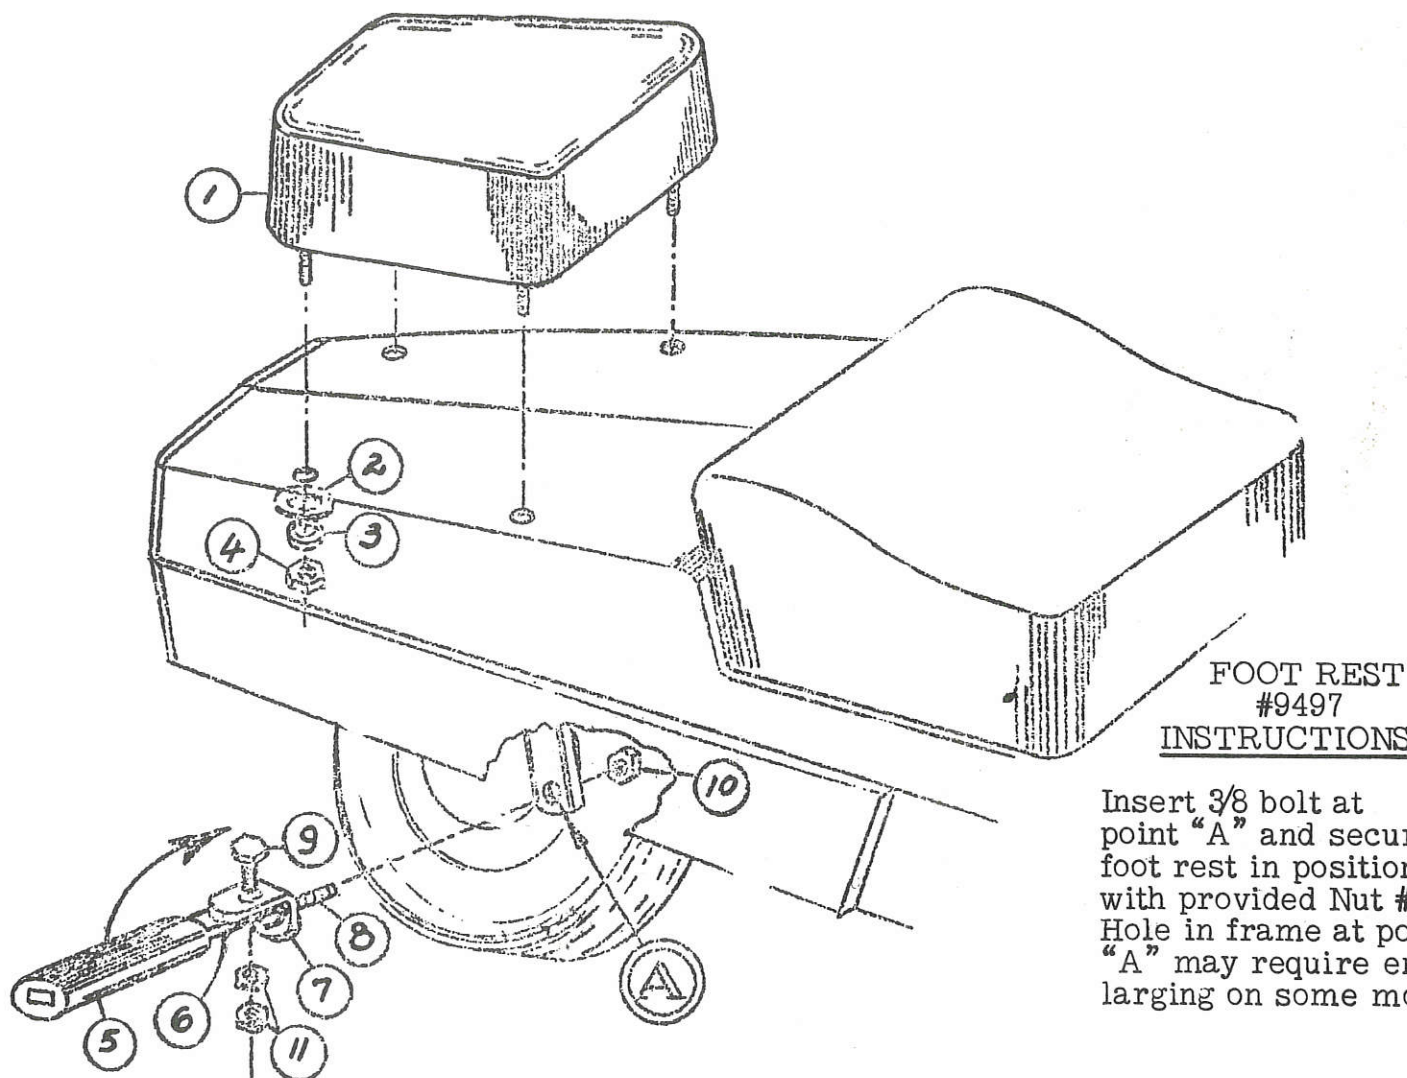

**FOOT REST
#9497
INSTRUCTIONS**

Insert 3/8 bolt at point "A" and secure foot rest in position with provided Nut #10. Hole in frame at point "A" may require enlarging on some models.

Ref. #	Part #	Part Name	No. Req'd
5	83103	Foot Peg Rubber	1
6	86326	Foot Peg Bar	1
7	86325	Foot Peg "L" Bracket	1
8	96346	Hex Head Cap Screw, 3/8-24 x 1 1/4	1
9	96344	Hex Head Cap Screw, 5/16-24 x 1 1/4	1
10	96350	Kep, 3/8-24 Thread	1
11	96349	Kep, 5/16-24 Thread	2