


# #8A-18402-A 1949-50 Ford Car & Station Wagon Outside Mirror Installation

cut along dotted line

BELT LINE ON DOOR


MOUNTING BRACKET TEMPLATE

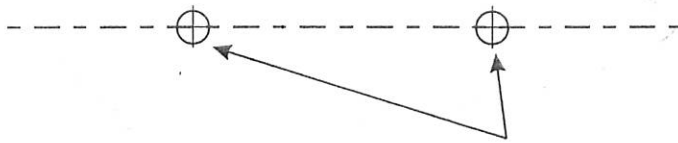


USE #30 or 1/8" DRILL

FRONT OF CAR


FRONT EDGE OF DOOR

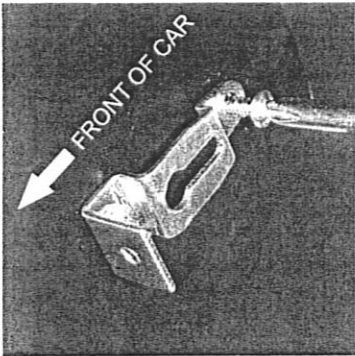


STEP 1. Use template to locate mirror mounting bracket holes on the door. Drill two 1/8" holes and install bracket to door with tapping screws.

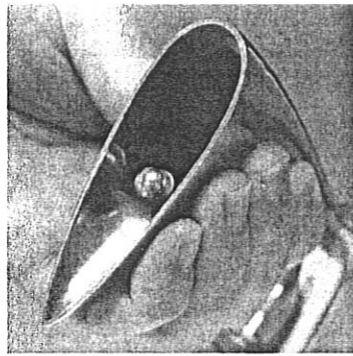

STEP 2. Insert 8-32 round head screw deep enough into mirror base so that there will be enough tension when head of screw is engaged against the mounting bracket.

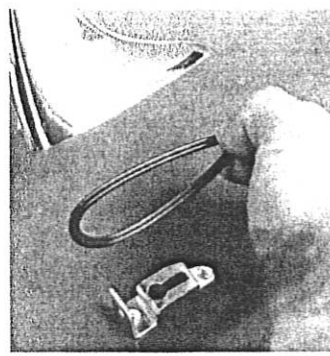

STEP 3. To prevent paint damage, place the mounting pad onto the mirror base then position the mirror over the mounting bracket. Engage the round head screw of the mirror base into the keyhole slot of the mounting bracket. Slide mirror rearward until fully secured while keeping the mounting pad between the mirror base and the surface of the door.

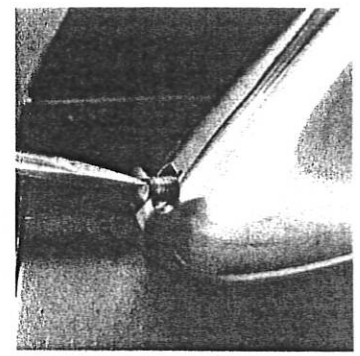

STEP 4. Install oval head screw into the front hole of the mirror base and tighten base to bracket.

## Mirror mounting template for station wagon only

FRONT EDGE OF WOOD PANEL



BOTTOM LINE OF WOOD PANEL

cut along dotted line



[www.dennis-carpenter.com](http://www.dennis-carpenter.com)

4140 Concord Parkway So., Concord, NC 28027 (704) 786-8139