


INSTRUCTIONS FOR INSTALLING AUTOMATIC CIGAR LIGHTER

NO. 8N-9004601-A FOR FORD TRACTORS:

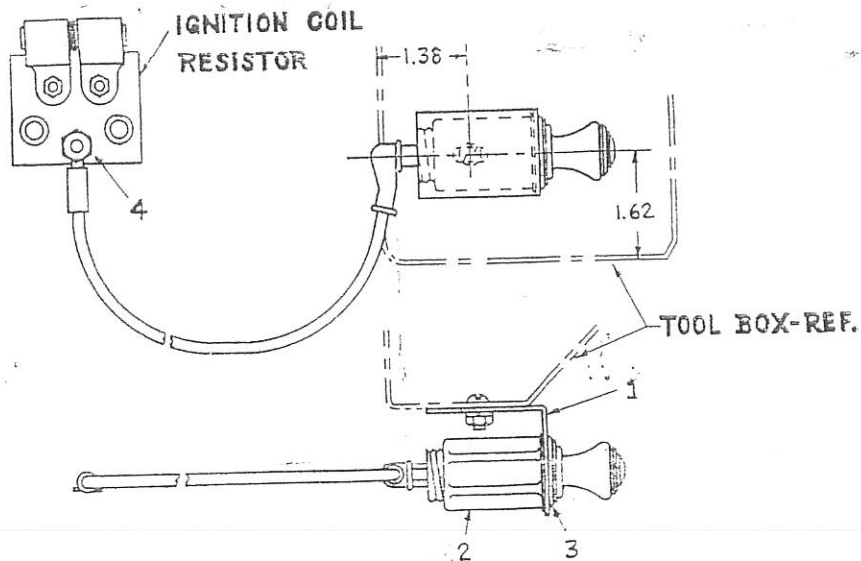

- A. Drill $7/32$ " hole in bottom of tool box in location shown.
- B. Attach mounting bracket (1) to bottom of tool box using screw, lock washer and nut furnished.
- C. Remove clamping shell (2) from Lighter. Insert Cigar Lighter (3) through hole in bracket from front side. Then replace clamping shell on base of lighter at back side.
Caution: Tighten by hand just sufficiently to hold Lighter securely.
- D. Attach Cigar Lighter wire terminal (4) to Terminal Post, location shown.