

DOOR LOCK INSTALLATION TEMPLET

1953 - 1956


#@\$!*@#\$\$% INSTRUCTIONS
MID FIFTY F-100 PARTS 1-800-252-1956

PART NUMBER
ALL 1130
ALL 1131
1133
PAGE NUMBER
1 of 1

RIGHT DOOR - Place at Door Handle





LEFT DOOR - Place at Door Handle

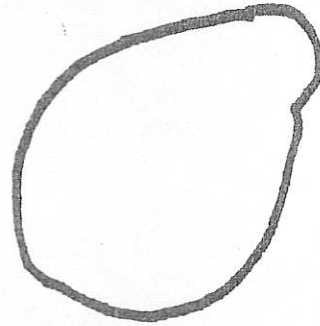

**PAPER REPRODUCTIONS ARE NOT ALWAYS
ACCURATE DUE TO COPIER MISALIGNMENTS, ETC.
CHECK TEMPLET WITH EXISTING LOCK LOCATION
BEFORE CUTTING**

ALIGN DOTTED LINE WITH DOOR EDGE

ALIGN DOTTED LINE WITH DOOR EDGE

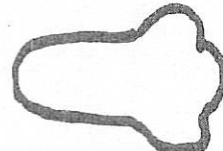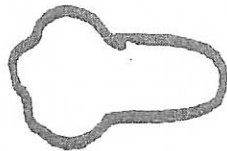

1. Cut templets out along dotted lines. CHECK TEMPLET AGAINST EXISTING DOOR LOCKS
2. Place carbon/tracing paper behind templet facing door.
3. Place templet according to directions: Top hole at door handle, side line at door edge.
4. Draw hole outline. Be accurate. Double check before cutting door.
5. Cut and install lock.

Note: Lock retainer is located directly behind the lock hole, under the weatherstrip. Assemble the lock, spring and lock ear carefully by compressing the spring and sliding the ear into the slot on the back of the lock. Lock retainer can also be installed from inside.

080203