


1955-56 Ford Car Body to Frame Mounting Kit

Each kit contains:

AMOUNT	PART
6	3/8" x 2" bolts
6	3/8" x 2 1/2" bolts
4	3/8" x 3 1/2" bolts
2	3/8" x 5 1/4" studs
2	7/16" x 2 1/2" studs
16	round star washers
18	round pads
24	square pads
8	clips
6	large flat washers
8	3/8" -16 lock'nuts
2	7/16"-14 lock nuts
2	1" flat washers

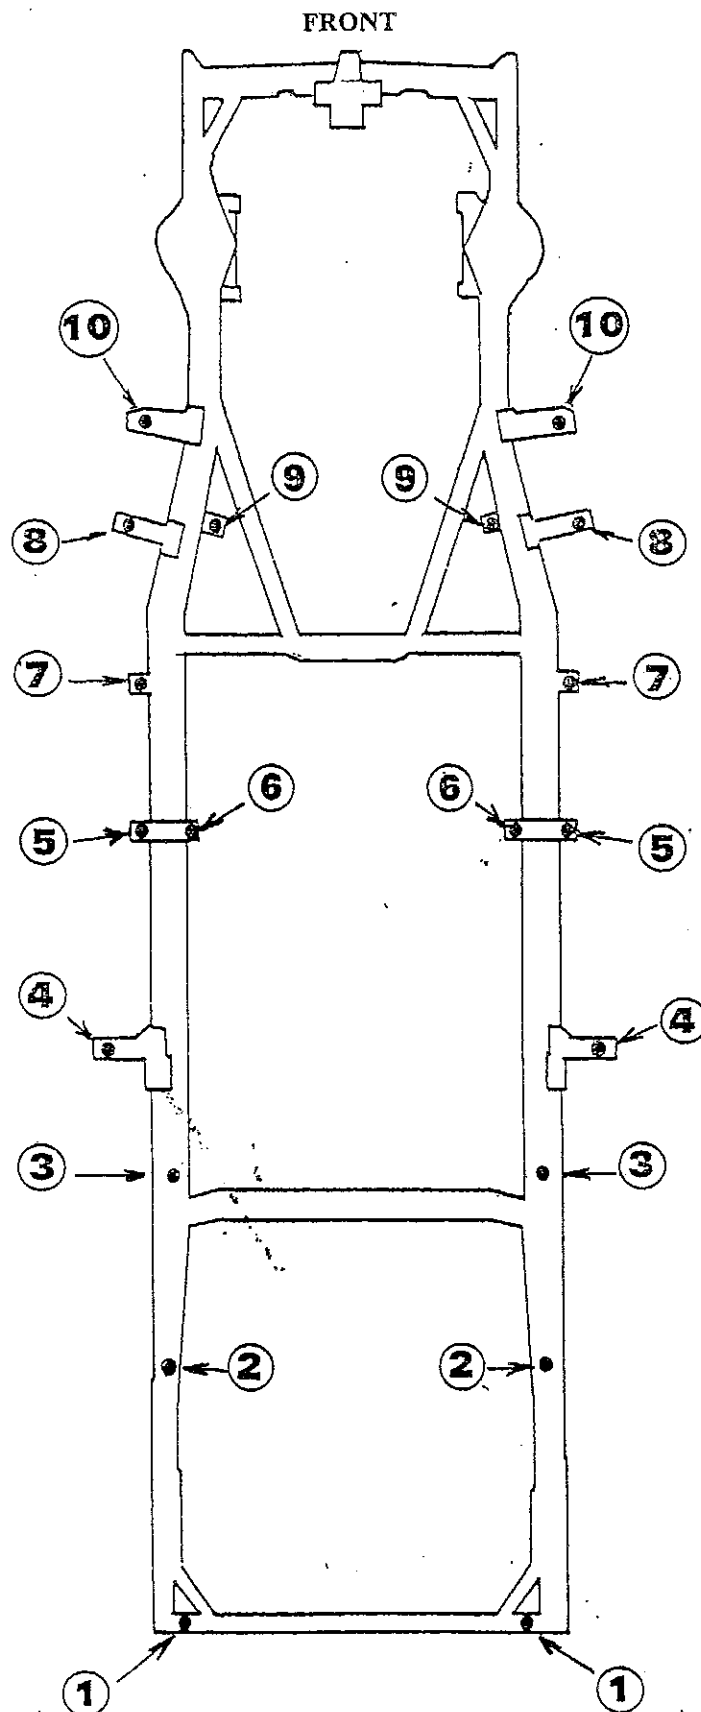

10 7/16" x 2 1/2" stud
square pad
1" flat washer
7/16" nut

8 3/8" x 2 1/2" bolt
round star washer
round pad
square pad
large flat washer
3/8" nut

6 3/8" x 2 1/2" bolt
round star washer
round pad
square pad
clip

4 3/8" x 3 1/2" bolt
round star washer
round pad
2 square pads
large flat washer
3/8" nut

2 3/8" x 2" bolt
round star washer
round pad
square pad

9 3/8" x 2" bolt
round star washer
round pad
square pad
clip

7 3/8" x 5 1/4" stud
round pad
square pad
large flat washer
2 3/8" nuts

5 3/8" x 2 1/2" bolt
round star washer
round pad
square pad
clip

3 3/8" x 2" bolt
round star washer
round pad
2 square pads

1 3/8" x 3 1/2" bolt
round star washer
round pad
square pad
clip