
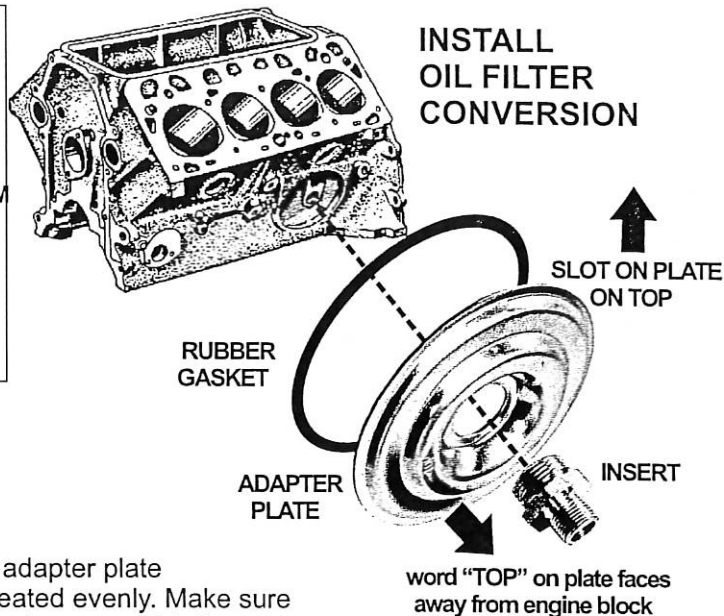


B7A-6882-A

Oil Filter Conversion Kit

Applies to Ford : 1955-57 T Bird, 1954-58 car, 1952-59 6 cyl, 1958-60 Edsel, 1954-64 F100-350 V8, 1952-64 F100-350 6 cyl.

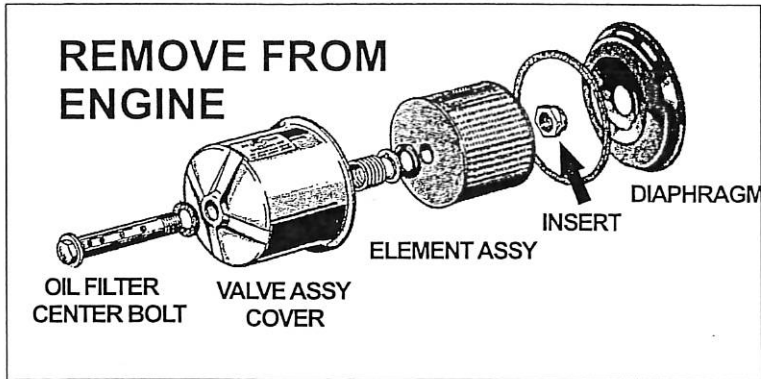

1. Remove the oil filter center bolt and valve assembly, cover, element assembly, insert, and diaphragm.
2. Clean the oil filter gasket surface on the engine block.
3. Install the new gasket, adapter plate, and insert, turning the adapter plate slightly in each direction to make sure that the new gasket is seated evenly. Make sure that the slot in the adapter plate is positioned at the top. Tighten insert to 25-ft. lbs. torque.
4. Put a thin layer of oil on the gasket of the oil filter, then hand tighten the oil filter until it touches the adapter plate, then tighten $\frac{1}{2}$ additional turn.
5. Run engine at fast idle checking for leaks, add oil if necessary.



4140 Concord Parkway So., Concord, NC 28027
(704) 786-8139 email: info@dennis-carpenter.com
www.dennis-carpenter.com