


**INSTALLING INSTRUCTIONS
FOR FORD 1957-58 DOOR SEALS
ALL 4-DOOR SEDANS**

Fits Body Style Number 73 Only

B7A-7320530-SET

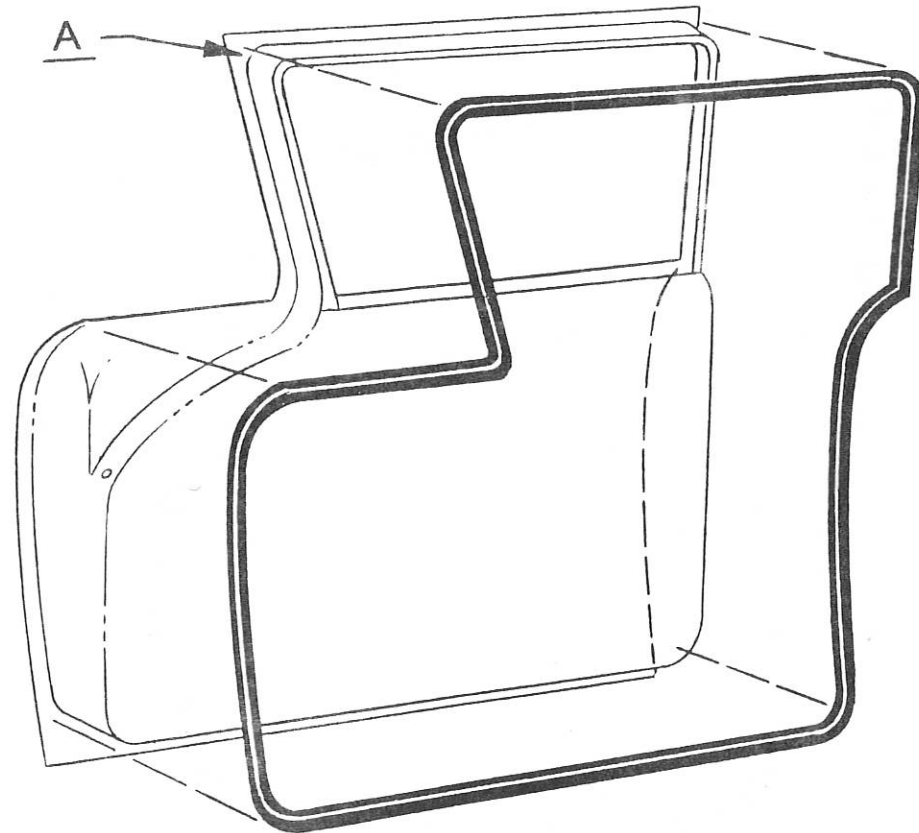

NOTE: Do not apply glue until Step #3.

STEP 1. Place the door seal weatherstrip in position on the door as shown, starting at point A. On the door seal at that location will be the numbers B5A-7020572-R, right hand, and B5A-7020573-R for the left side door.