


#B9A-1141-A Ford Car Sunray Wheel Cover Center Emblem Installation

Installing emblem onto non-drilled wheel cover

1. Cut out the circular template shown on this page then cut and tape the template together as described on the template. This preparation gives the template the cone shape necessary to fit the wheel cover properly.
2. Center the template on the outside of the wheel cover, tape into position and mark the 3 hole positions.
3. Center punch the hole positions.
4. Drill smaller diameter pilot holes then enlarge the holes to 7/32".
5. Place plastic emblem insert into the chrome center ring then place the assembly onto wheel cover.
6. Secure emblem assembly to wheel cover with the supplied screws.

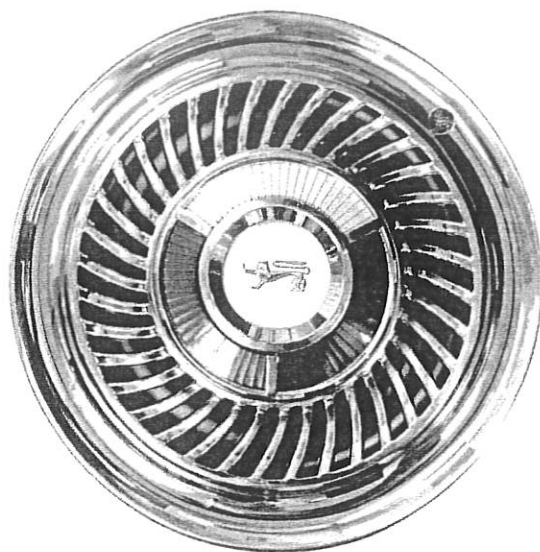

#B9AB-1130-B 1959 full disc hub cap with Sunray center emblem



www.dennis-carpenter.com

4140 CONCORD PARKWAY SO., CONCORD, NC. 2802

704-786-8139