


Move in other Room

INSTRUCTIONS FOR INSTALLING RUBBER COWL LACING
ON 1959 PASSENGER CAR

PLACE THE COWL LACING & METAL RETAINER STRIP TOGETHER STARTING AT ONE END. THE METAL RETAINER HAS HOLES. AT THE FIRST HOLE IN THE METAL, PUNCH A HOLE THROUGH THE RUBBER & SCREW THE COWL LACING & RETAINER TO THE COWL. DO THE SAME WITH THE REMAINING 9 SCREWS GOING ACROSS FROM ONE SIDE TO THE OTHER.

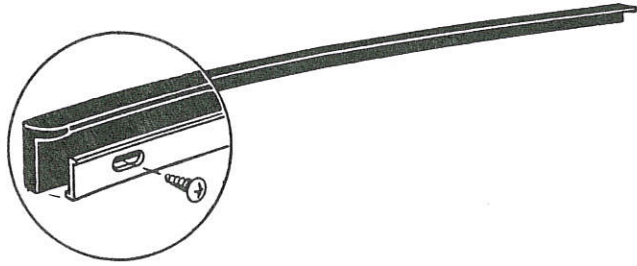

B9A-16740

1959
COWL LACING

13 FEB 02