


INSTALLING INSTRUCTIONS
1959 FORD DOOR SEALS
ALL 2 DOOR SEDANS

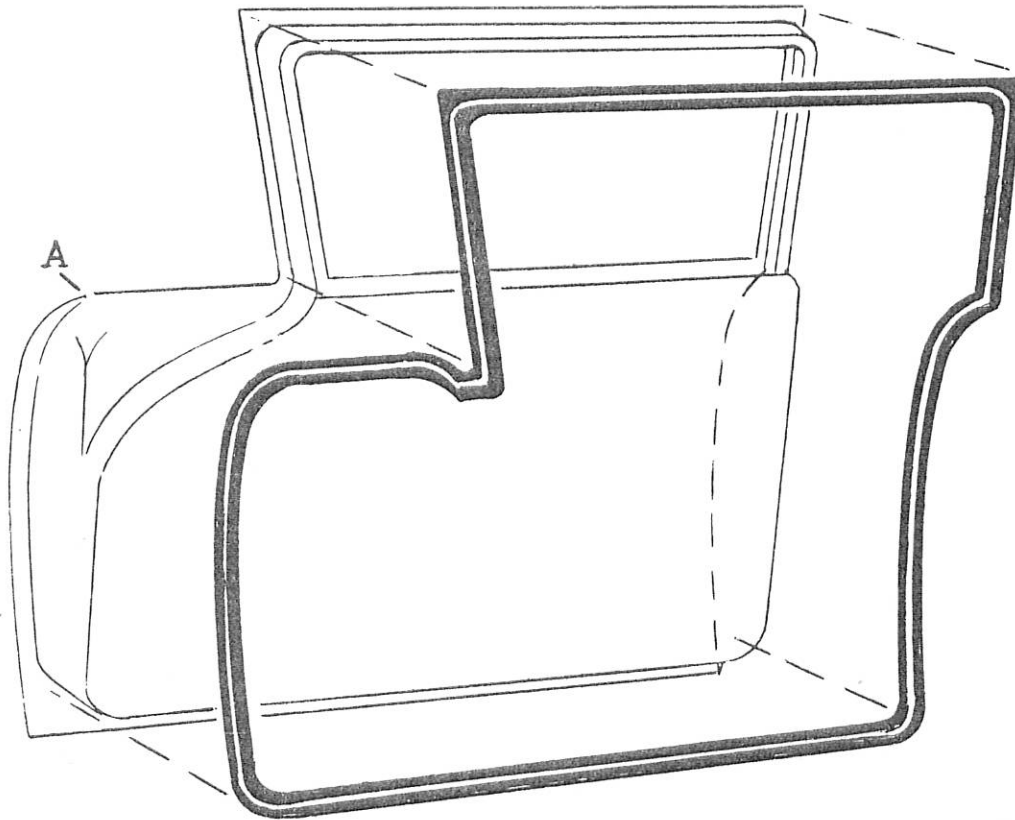

- STEP #1 PLACE THE DOOR SEAL IN POSITION ON THE DOOR TO SEE THAT THE CORNERS AND CURVES FIT IN POSITION.
- STEP #2 STARTING AT POINT 'A', GLUE THE DOOR SEAL AND GO DOWN THE FRONT, ALONG THE BOTTOM THEN UP THE BACK SIDE TO THE TOP.
- STEP #3 WHEN GLUING DOOR SEAL IN PLACE, BE CAREFUL NOT TO PULL OR STRETCH THE RUBBER.

B9A-7020530-PR