


INSTALLING INSTRUCTIONS
 FOR FORD 1959 DOOR SEALS
 FOR 2 DR HARDTOP, RETRACTABLE & CONVERTIBLE

STEP # 3
 B9A - 7621382 R.H.
 B9A - 7621383 L.H.

STEP # 2
 B9A - 7020563-L
 B9A - 7020564-R

STEP # 1
 B9A - 7620565 R.H.
 B9A - 7620566 L.H.

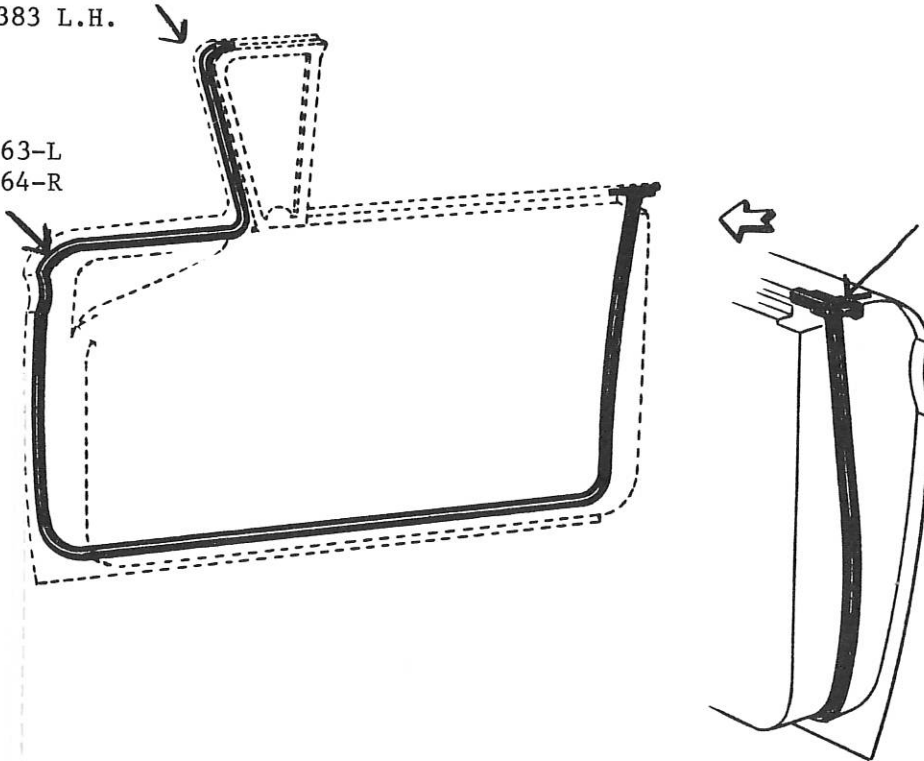

B9A - 7620565-R

Installing instructions are as follows:

- STEP # 1 Glue and attach B9A-7620565-R.H. Right and B9A-7620566-L.H. Left rubber seal to upper rear of door.
- STEP # 2 Glue and attach B9A-7020563-L Left and B9A-7020564-R Right to upper front of door (Dog leg).
- STEP # 3 Glue and attach B9A-7621382-R.H. and B9A-7621383-L.H. rubber seal to top front of vent window frame assembly.
- STEP # 4 Glue and attach extrusion between dog leg (STEP # 2) and seal on top front of vent window frame assembly (STEP # 3).
- STEP # 5 Glue and attach extrusion starting at dog leg (STEP # 2) down front of door, across bottom of door and up back of door. Fit this extrusion up to bottom of B9A-7620565-R.H., B9A-7620566-L.H.(STEP # 1). Trim off excess rubber and finish gluing.
- STEP # 6 Readjust striker plate so door will close properly.