

1952-1954 Ford car body to frame pad installation

Kit contains:

| quantity | part |
|----------|---------------------------|
| 2 | 7/16"-14 x 2 3/8" studs |
| 19 | 3/8"-16 x 2" bolts |
| 15 | 3/8" lock washers |
| 21 | 1 1/4" thick flat washers |
| 6 | 1 1/4" thin flat washers |
| 23 | square pads |
| 2 | 7/16"-14 lock nuts |
| 21 | round pads |
| 6 | 3/8"-16 lock nuts |
| 2 | horse shoe shims |
| 2 | 3/8"-16 x 1 5/8" bolts |
| 2 | 1" flat washers |



4140 Concord Parkway So., Concord, NC 28027
(704) 786-8139 email: info@dennis-carpenter.com
www.dennis-carpenter.com

- 12** 7/16"-14 x 2 3/8" stud
square pad
1" flat washer
7/16"-14 lock nut

- 10** 3/8"-16 x 2" bolt
1 1/4" thick flat washer
round pad
square pad
1 1/8" thin flat washer
3/8"-16 nut

- 8** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" lock washer
round pad
square pad
horse shoe shim

- 6** 3/8"-16 x 1 5/8" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad
square pad

- 4** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad
square pad

- 2** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad
square pad

- 11** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad


- 9** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad

- 7** 3/8"-16 x 2" bolt
1 1/4" thick flat washer
round pad
square pad
1 1/4" thin flat washer
3/8"-16 nut

- 5** 3/8"-16 x 2" bolt
1 1/4" thick flat washer
round pad
square pad
1 1/4" thin flat washer
3/8"-16 nut

- 3** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad

- 1** 3/8"-16 x 2" bolt
3/8" lock washer
1 1/4" thick flat washer
round pad

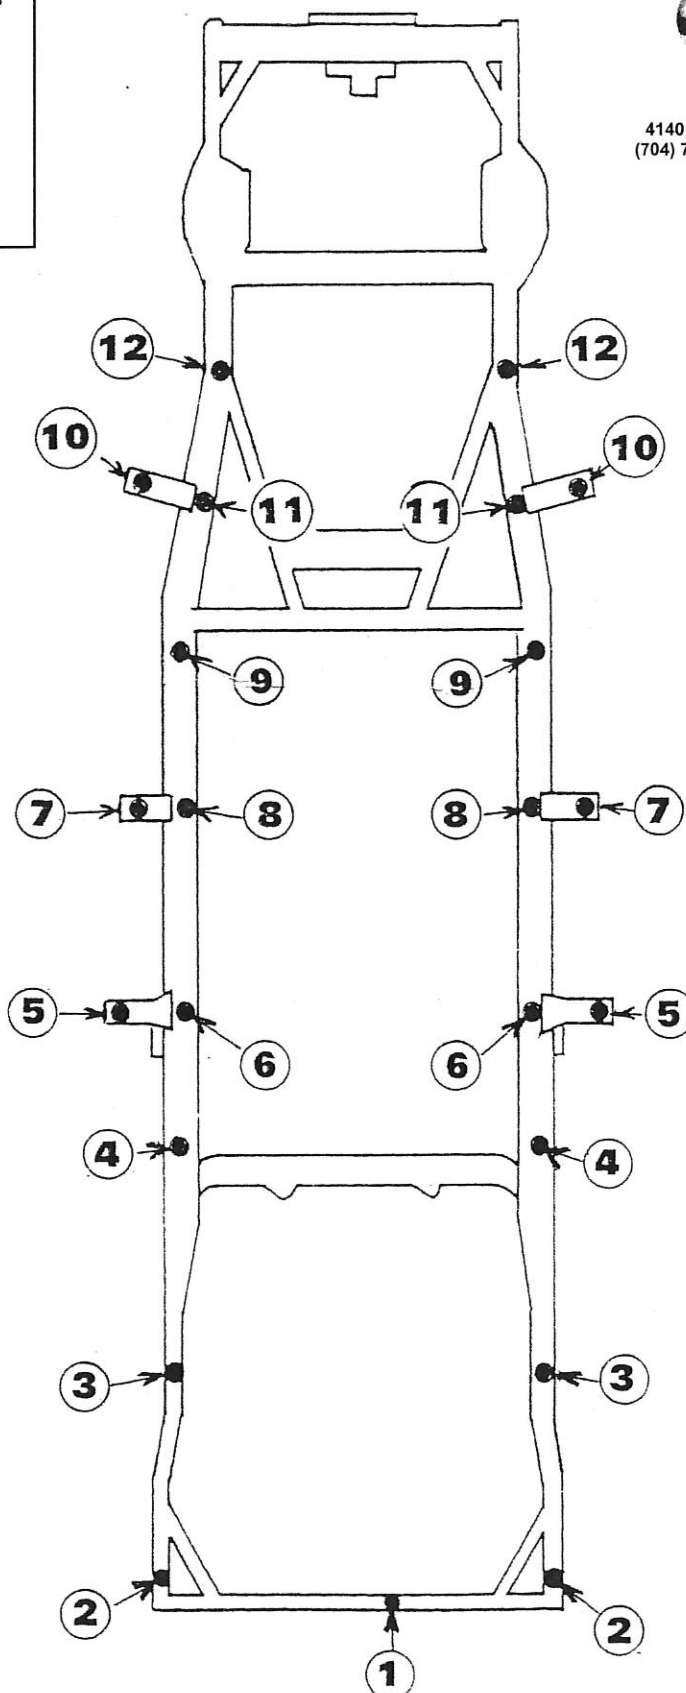

BA-50001