


1952/54 2 DOOR AND 4 DOOR SEDAN

FRONT DOOR

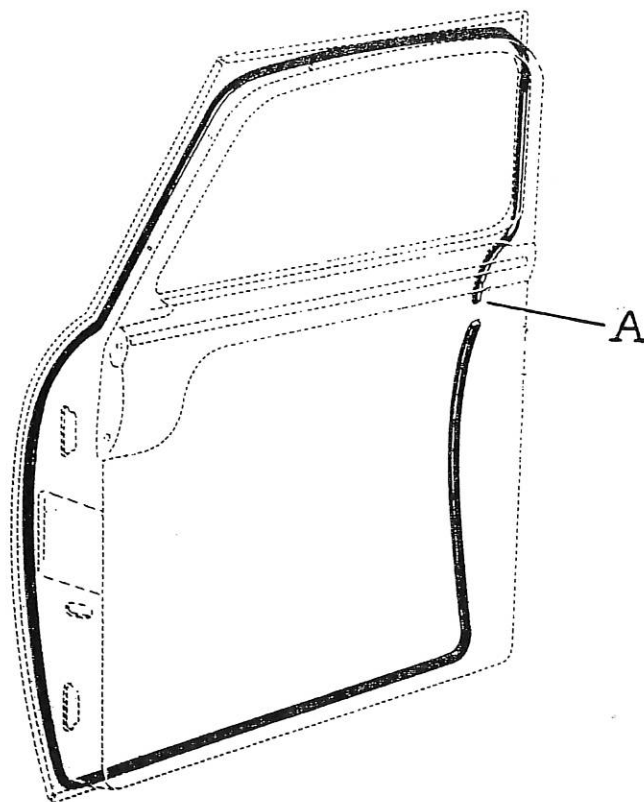

Installation Instructions:

Starting at Point A on lockside of door panel, glue and attach rubber seal. Continue up and over the top of glass frame to front of door, down hinge-side of door then along the bottom and up the lockside to Point A. Cut off excess rubber and finish glueing.

*BA-7320530-SET*  
*BA-7020530-Pn.*