

1960-65 Falcon 4 dr Sedan Door Weather Stripping Installation



HELPFUL TIPS


BEFORE APPLYING WEATHER STRIPPING

Experience has shown us that taping the door seal into position before any adhesive is applied allows you to check the fit of the seal and to make any door adjustments if necessary.

Apply the adhesive to the door, not the seal. Glue around the door as described in the instructions.

The best (and cleanest) results comes from glueing a 12" to 18" section of the door at a time, applying the weather stripping then taping it into position before continuing onto the next 12" to 18" section.

After the adhesive has had ample time to cure the tape can be removed.

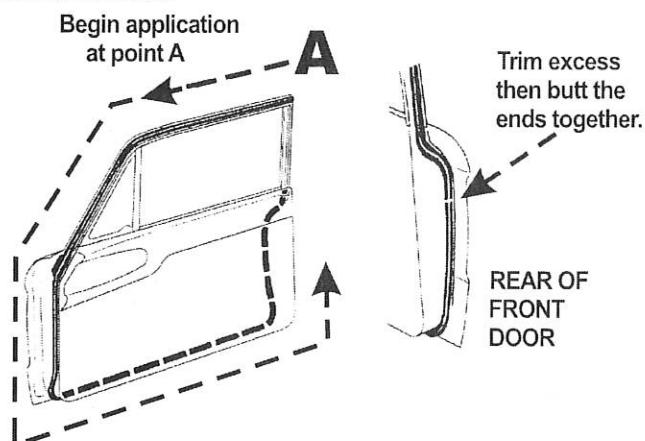

INSTALL FRONT DOOR SEALS

STEP 1

Remove the old door seals and glue material from the doors. Clean doors thoroughly where the seals are to be adhered. A degreaser/ wax remover solution is recommended.

STEP 2


Determine the left and right door seals as indicated on

STEP 3

Start weather stripping application by beginning at the upper rear corner of the door window frame (point A on illustration). Glue and apply weather stripping along the top and move towards the front of the door. Continue application down the front of the door then along the bottom to the rear. Apply around the lower rear corner then up the latch side of door.

STEP 4

Again starting at point A, continue glueing the remainder of the weather stripping down the rear of the door. Where the ends of the material meet, trim the excess so that the two ends butt tightly together then finish glueing.

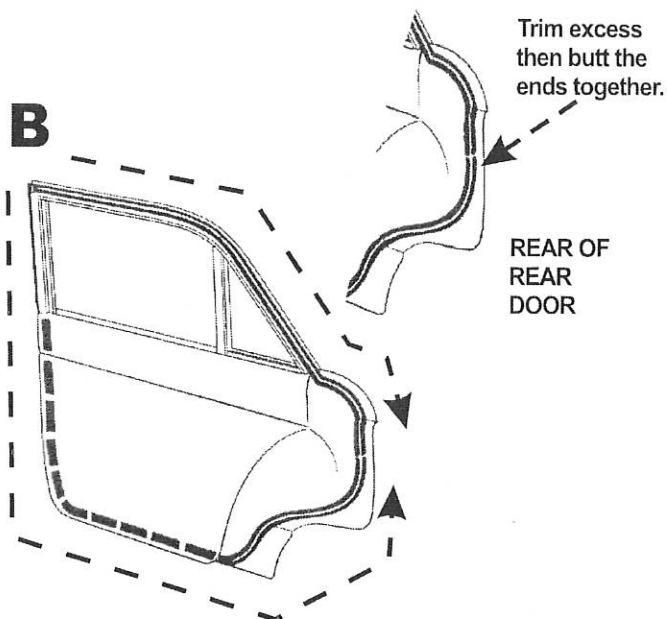

INSTALL REAR DOOR SEALS

STEP 1

Remove the old door seals and glue material from the doors. Clean doors thoroughly where the seals are to be adhered. A degreaser/ wax remover solution is recommended.

STEP 2


Determine the left and right door seals as indicated on molded sections.

STEP 3

Start weather stripping application by beginning at the upper front corner of the door window frame (point B on illustration). Glue and apply weather stripping along the top and move towards the rear of the door. Continue application down the rear of the door.

STEP 4

Again starting at point B, glue the remainder of the weather stripping down the front of the door, along the bottom then up the rear of the door. Trim the stripping so that the two ends butt tightly together then finish glueing.

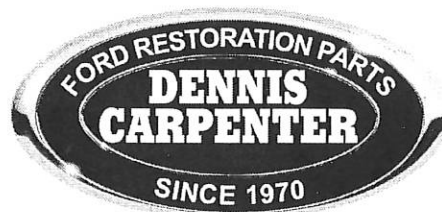

4140 Concord Parkway So., Concord, NC 28027
(704) 786-8139 email: info@dennis-carpenter.com
www.dennis-carpenter.com

CODZ-7420530-PR

CODZ-7320530-SET