


1961-63 THUNDERBIRD
DOOR SEAL INSTALLATION INSTRUCTIONS

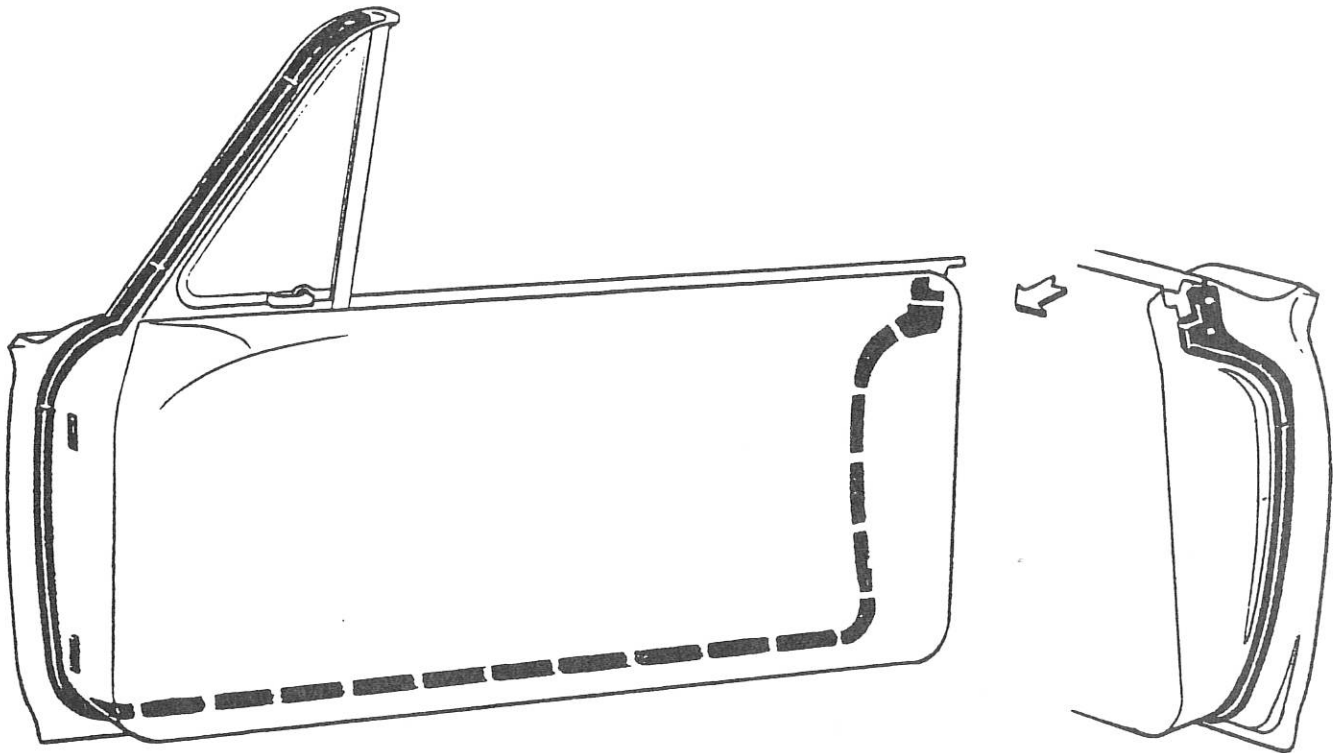

Before applying glue:

Start at the top of vent window frame (the rubber seal has (1) screw hole at that location). Go down the vent frame and fit the seal around the curve of the door and down the front (hinge side). Then along the bottom and up the lockside. At this location the seal is moulded, has (2) holes for attaching seal to door.

When the door seal is in position it now can be glued to the door panel.

C15B6320530-R