


# 1961-67 Ford Econoline Van Window Rubber Seal Installation


Rear door glass seal and  
side door glass seal  
#C2UZ-8941954-C

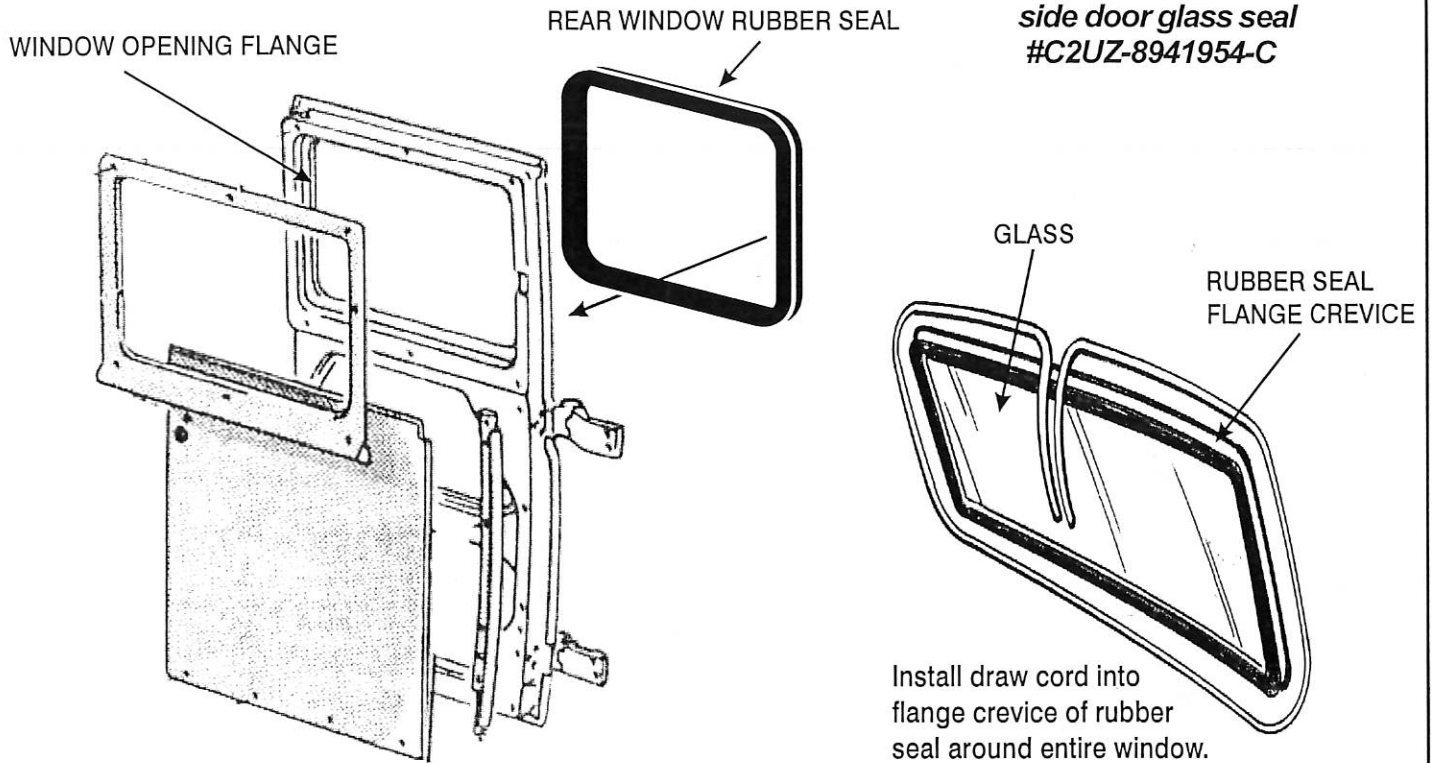

**NOTE:** It is recommended to use an auto glass sealer when installing the new rubber window seals to prevent possible leaking. Permatex Auto Glass Sealer 7651259 is one example.

## INSTALLING WINDOW RUBBER SEAL

1. Remove all old weather stripping and weather stripping sealer from the window opening flange.
2. Apply a continuous bead of sealer to the window opening flange. Apply a continuous bead of sealer into the glass crevice of the rubber seal then place the rubber seal around the glass. The rubber seal should fit loosely around the glass. The rubber seal is made to fit the metal frame.
3. Tape the rubber seal to the glass to hold it in place
4. Apply a soap/water solution to the flange area of the weather strip, then install a draw cord into the flange crevice of the weather stripping. Allow about 12 inches overlap at the top center.
5. Position the glass assembly in the opening and have a helper apply pressure to the outside of the glass. From the inside, begin pulling the draw cord. This procedure allows the weather stripping to be pulled over the flange area. Alternate from side to side when pulling the cord to keep the installation even.

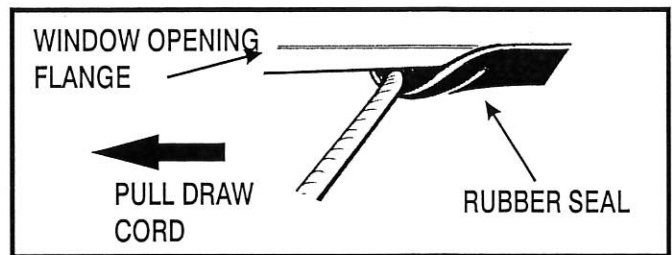

### HELPFUL TIPS

Masking tape can be used to temporarily hold the rubber seal to the glass while handling.



Manufacturing Quality Ford Restoration Parts

**704-786-8139**

4140 CONCORD PARKWAY SO., CONCORD, NC. 28027

[www.dennis-carpenter.com](http://www.dennis-carpenter.com)