


1963-65 FAIRLANE HARDTOP
DOOR SEAL INSTALLATION INSTRUCTIONS

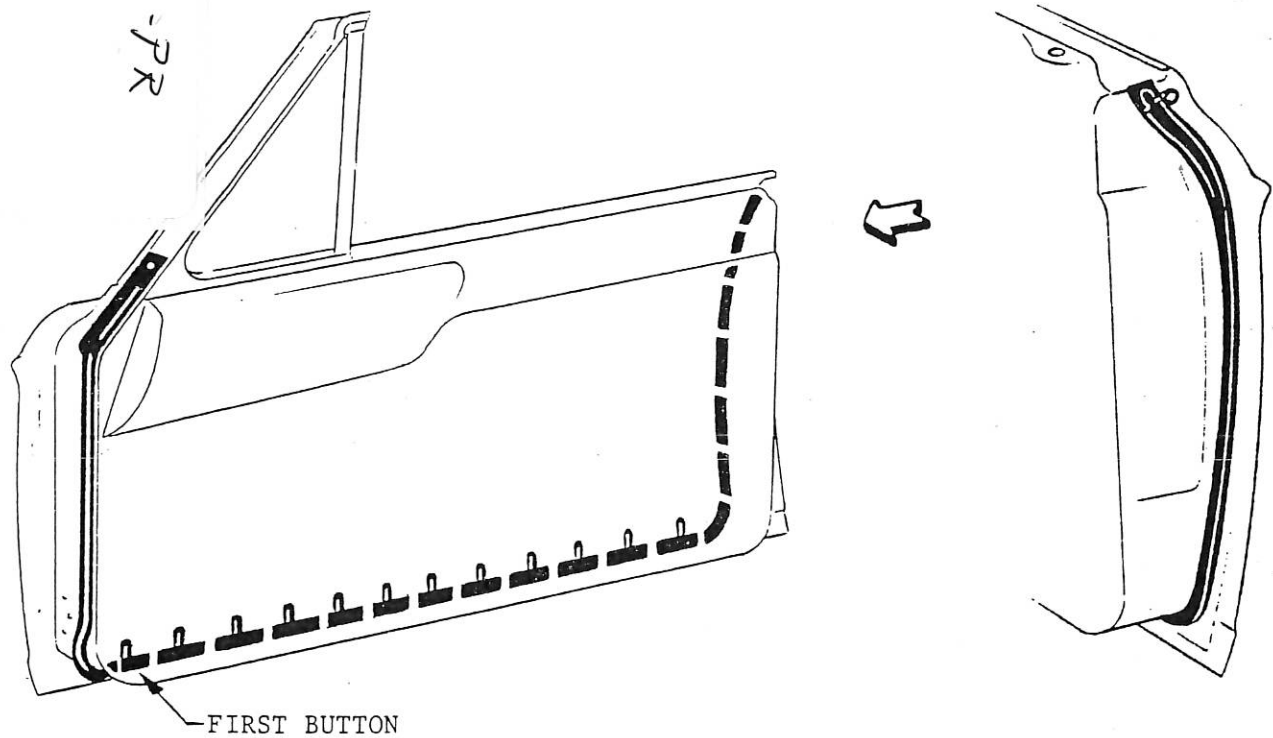

NOTE: DO NOT apply glue until Step #3

- STEP # 1 Starting at the bottom front of door, with the door seal, place the first plastic button into position and also the remaining buttons into holes along the bottom and then continue up the rear (Lock side) and screw tab on door seal to door.
- STEP # 2 With the door seal, from the first button forward, go up the front (Hinge side) of the door and part way up the vent window frame. Screw the rubber to vent frame thru the hole near the top of seal.
- STEP # 3 The door seal is now in position to apply adhesive to the lock side, hinge side and vent frame.