

#C3DZ-7620530-PR 1963-65 Falcon Hardtop / Convertible Door Seal Installation



BEFORE APPLYING WEATHER STRIPPING

Experience has shown us that taping the door seal into position before any adhesive is applied allows you to check the fit of the seal and to make any door adjustments if necessary.

Apply the adhesive to the door, not the seal. Glue around the door as described in the instructions.

The best (and cleanest) results comes from glueing a 12" to 18" section of the door at a time, applying the door seal then taping it into position before continuing onto the next 12" to 18" section.

After the adhesive has had ample time to cure the tape can be removed.

INSTALL FRONT DOOR SEALS

STEP 1

Remove the old door seals and glue material from the doors. Clean doors thoroughly where the seals are to be adhered. A degreaser/ wax remover solution is recommended.

STEP 2

Determine the left and right door seals.

STEP 3

Start door seal application by beginning at base of the vent window frame. Align the 2 holes of the rubber seal with the holes on the window frame and attach with screws.



STEP 4

Glue and attach the seal down the front end of the door to the bottom corner. At the bottom of the door seal there is a molded section that will direct the seal toward the bottom outer edge. Glue and attach the seal along the bottom to the rear corner then up the rear end of the door to the top corner.

STEP 5

Up the back end of the door (to top rear corner) the seal has a molded "S" shape that will fit into the top lip of the door and is attached with 2 screws.

NOTE: It is necessary to use a weather stripping adhesive in order to install door seals. Dennis Carpenter recommends and sells 3M brand Weather Stripping Adhesive. Our part # is COAZ-19554-A

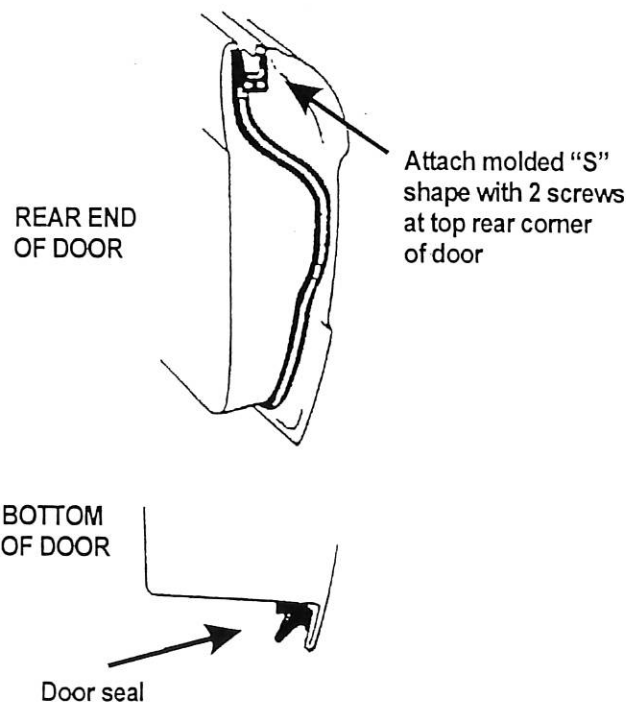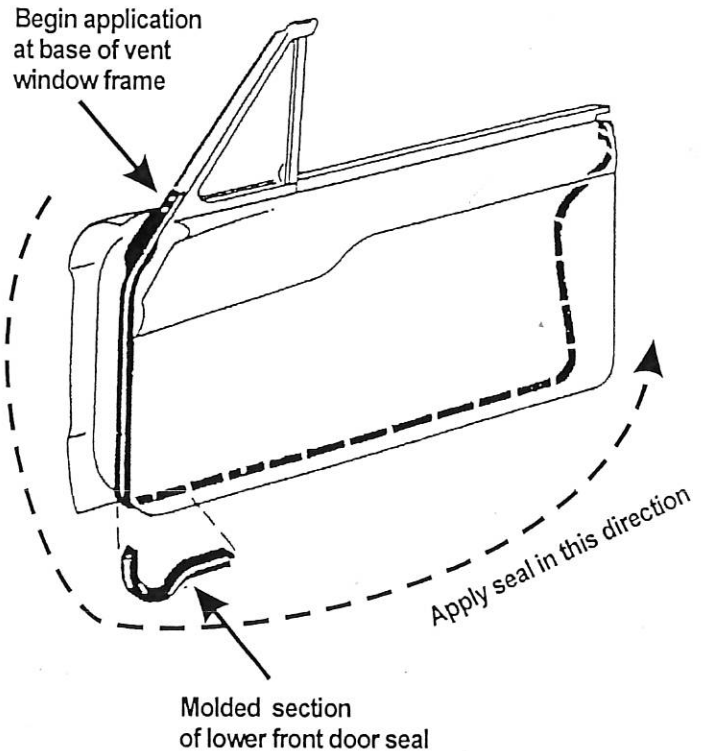

4140 Concord Parkway So., Concord, NC 28027
(704) 786-8139 email: info@dennis-carpenter.com
www.dennis-carpenter.com