

DOOR WEATHERSTRIPPING INSTALLATION

1965-1968 Galaxie Hardtop and Convertible

NOTE: For 1967 and 1968 models, the first nylon push-in fastener must be removed from the end of the weatherstripping which has the smallest molded end, (because there is no hole in the door for a fastener.)

Begin weatherstripping installation from the front, top of the door. (just below the front of the vent window)


Secure the smallest, metal reinforced molded end of the weatherstripping to the door with a screw.

Push the nylon fasteners into the appropriate holes by going down the door front, along the bottom towards the rear of the door then up the back edge of the door.

Secure the largest molded end to the door with screws and supplied push-in fasteners. Note that the nylon fasteners are to be used in the non reinforced hole of the weatherstripping's molded end.

To secure the lower corners of the weatherstripping to the door, apply weatherstripping adhesive,

**Begin installation at
front of door**

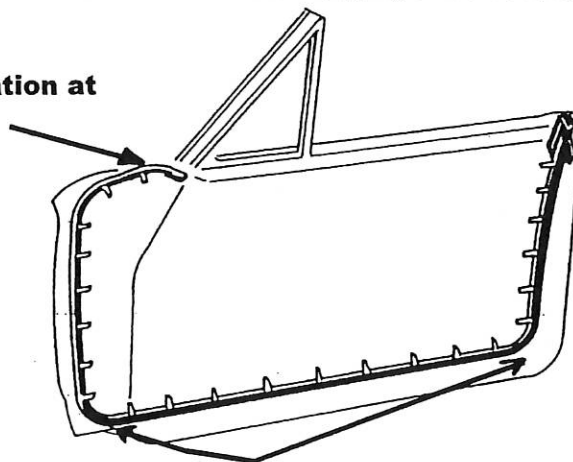

Apply adhesive to lower corners to secure weatherstrip



The largest molded end of the weatherstripping installs on the back edge of the door. Metal reinforced portion is secured to the door with screws. Non reinforced portion is secured with push-in fasteners.

C542-6320530-RK