


1966-67 FAIRLANE 2 DR. HARDTOP
DOOR SEAL INSTALLATION INSTRUCTIONS

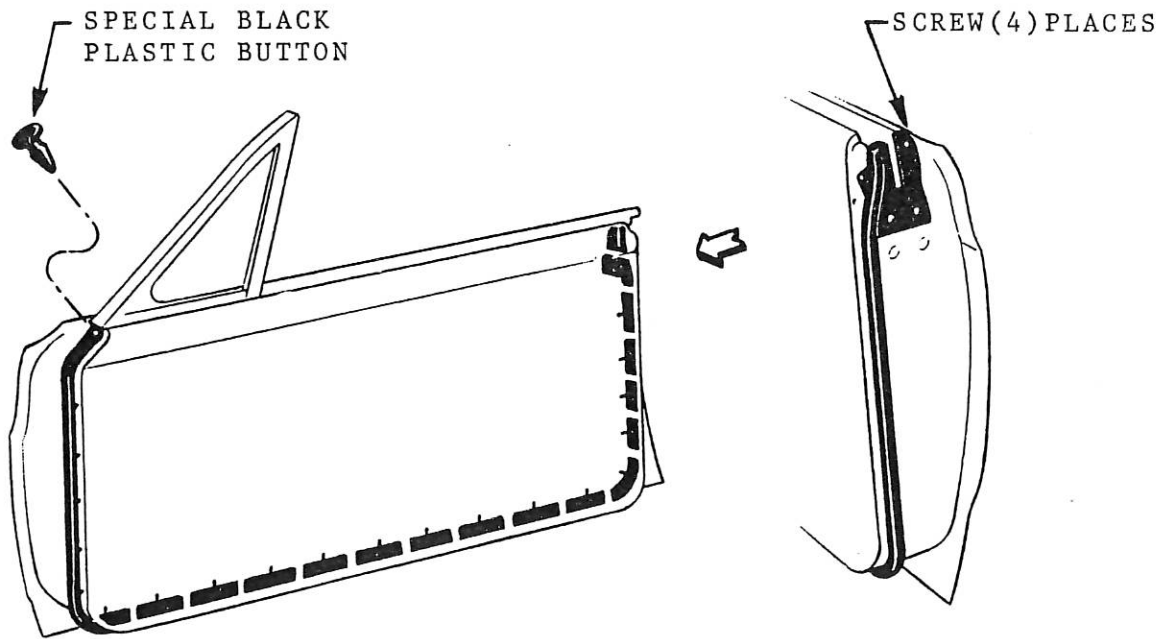

NOTE: DO NOT APPLY GLUE UNTIL STEP #5

STEP #1 START AT THE TOP LOCKSIDE OF THE DOOR WITH THE WEATHERSTRIP IN POSITION SO THE (4) SCREW HOLES LINE UP WITH THE SAME HOLES IN THE DOOR.

STEP #2 SCREW THE WEATHERSTRIP ONTO THE DOOR

STEP #3 START DOWN THE LOCKSIDE OF THE DOOR BY PUSHING THE PLASTIC BUTTONS ON THE WEATHERSTRIP INTO THE HOLES OF THE DOOR PANEL. CONTINUE ALONG THE BOTTOM AND UP THE HINGE SIDE OF THE DOOR.

STEP #4 LINE UP THE HOLE WHICH IS NEAR THE TOP END OF THE WEATHERSTRIP WITH THE HOLE IN THE DOOR AND WITH THE WEATHERSTRIP IN POSITION. PRESS THE SPECIAL BLACK PLASTIC BUTTON IN THE HOLE, NOTE TO USE BUTTON IN ENCLOSED KIT, ENLARGE HOLE WITH 3/16" DRILL.

STEP #5 APPLY GLUE WHERE REQUIRED

C602-6320530-PR