

#C3AZ-6243720-A Trunk Lid Rubber Seal

NOTE: It is necessary to use a weather stripping adhesive in order to install trunk seals. Dennis Carpenter Ford Reproductions recommends and sells 3M brand Weather Stripping Adhesive. Our part # is COAZ-19554-A




Experience has shown us that taping the seal into position before any adhesive is applied allows you to check the fit of the seal and also aids in applying the seal.

Apply the adhesive to the channel on the body, not the seal.

The best (and cleanest) results comes from glueing a section of the trunk seal at a time by removing the tape, applying the glue then reapplying the tape to hold the seal into position. After the adhesive has cured you can remove the tape.

Remember that new seals are more resilient to compression and will cause your trunk lid to close tightly.

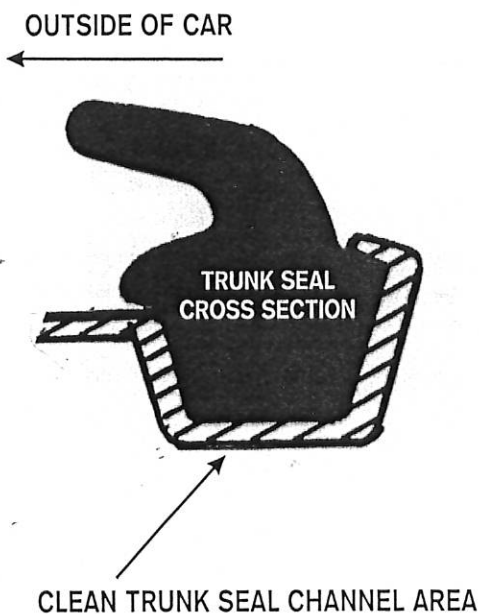

HOW TO INSTALL TRUNK SEALS

NOTICE: It is not necessary to remove the trunk lid from the car in order to replace the trunk seals.

STEP 1


Remove the old trunk seal and glue material from the channel. Clean the metal thoroughly where the seals are to be adhered. A degreaser/ wax remover solution is recommended.

STEP 2

Arrange the new trunk seal so that an end begins at the trunk latch assembly.

STEP 3

Glue one end of the seal into the channel first. Next glue along the bottom of the trunk to the corner. Continue glueing the seal up the side of the trunk to the top, across the top then down the opposite side. Bring the un-glued end of the seal to the beginning end, mark it then cut off the excess. Glue into place.

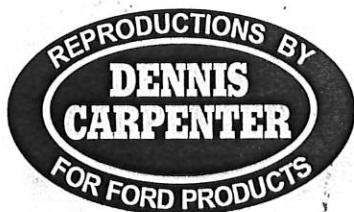

Manufacturing Quality Ford Restoration Parts

704-786-8139

4140 CONCORD PARKWAY SO., CONCORD, NC. 28027

www.dennis-carpenter.com